


NÁVOD K POUŽITÍ



BR 2198

Čistič pórů

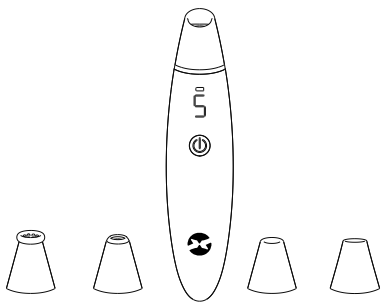

Pro správné a bezpečné používání zařízení si prosím pečlivě přečtete tyto pokyny.



Před prvním používáním zařízení si prosím přečtete celý uživatelský manuál, zejména bezpečnostní pokyny. Uchovejte tento návod na bezpečném místě pro budoucí použití. Pokud zařízení prodáte dál, musíte také předat tento provozní manuál.

Tento návod je také dostupný ke stažení v elektronické podobě: www.jaxmotech.de/downloads

Nebo nás kontaktujte. Rádi vám zašleme provozní instrukce ve formě elektronického PDF souboru.
E-mail: service@jaxmotech.de
Telefon: +49 (0)6831 505 9800

EC – DEKLARACE SHODY

Produkt popsáný v tomto návodu splňuje všechny požadavky příslušné harmonizované požadavky EU. Kompletní deklarace shody je k dispozici na internetu pod číslem www.jaxmotech.de/downloads.

Ilustrace obsažené v tomto návodu mohou být v některých detailech reprodukovány. Mohou se lehce lišit od skutečného provedení vašeho zařízení. Řiďte se v takovém případě popsanými fakty. Výrobce si vyhrazuje právo provádět takové změny, které neovlivňují fungování zařízení. Zařízení, které jste si koupili, mohlo být vylepšeno a proto se může lišit od provozních instrukcí. Nicméně funkce a provozní podmínky jsou totožné, takže můžete tento návod k obsluze plně využít.

Vyhrazujeme si právo na technické změny nebo tiskové chyby.

Produkty označené symbolem „CE“ jsou v souladu se všemi platnými předpisy Evropské unie pro Evropský hospodářský prostor.

1 BEZPEČNOSTNÍ POKYNY

Před použitím zařízení si prosím pečlivě přečtete bezpečnostní pokyny. Informace v nich obsažené slouží k ochraně vašeho zdraví i zařízení. Nedodržení bezpečnostních pokynů může mít vážné negativní dopady na zdraví a poškození zařízení.

Zamýšlené použití

Čistič pórů– BR 2198 od značky SEG – je určen jako kosmetický přístroj pro péči o pleť obličeje. Pomocí vakuové technologie lze čistit pleť obličeje do hloubky pórů a ošetřovat černé tečky. Odstraňují se odumřelé kožní buňky a stimuluje se krevní oběh.

Zařízení je určeno výhradně pro soukromé použití, nikoli pro komerční použití. Nepoužívejte zařízení na zvířatech. Není určen pro použití v lékařských nebo terapeutických zařízeních.

Zařízení je určeno výhradně pro provoz v uzavřených prostorech. Zařízení používejte pouze v souladu s jeho určeným účelem.

V případě nesprávného použití již nelze zaručit bezpečnost a funkčnost zařízení a zaniká jakýkoli nárok na záruku.

Vysvětlení použitých symbolů

NEBEZPEČÍ!

Označuje nebezpečnou situaci, která může při nedodržení pokynů vést k bezprostřednímu ohrožení života a zdraví.

VAROVÁNÍ!

Označuje nebezpečnou situaci, která může při nedodržení pokynů vést k možnému ohrožení života a zdraví.

UPOZORNĚNÍ!

Označuje nebezpečnou situaci, která může při nedodržení pokynů vést ke středně těžkým nebo lehkým zraněním.

POZNÁMKA!

Označuje situaci, která může při nedodržení pokynů vést k poškození zařízení.

VAROVÁNÍ! NEBEZPEČÍ VÝBUCHU!

- Nesprávné uložení zařízení s integrovanou baterií může vést k explozím, protože baterie jsou vysoce hořlavé. Proto udržujte zařízení a USB nabíjecí kabel mimo dosah zdrojů tepla (např. varných desek, plynových plamenů, vytápění, přímého slunečního světla).
- Neumísťujte v blízkosti výrobku žádné otevřené zdroje ohně, jako jsou hořící svíčky. Svíčky a jiné otevřené plameny musí být vždy mimo dosah předmětu, aby se zabránilo šíření ohně.
- Nevystavujte zařízení přímému slunečnímu záření.
- Vestavěná baterie nesmí a nemůže být vyměněna svépomocí ani zvětšena. Pokud baterie není správně vyměněna, hrozí riziko výbuchu.
- Vyměňujte pouze za stejný nebo ekvivalentní typ baterie. Pokud je baterie vadná, kontaktujte specializovaný servis.
- Výrobek obsahuje lithium-iontovou baterii. Nesmí být rozebírána, vzhazována do ohně ani krátkodobě uzavřena.
- Baterii neupravujte a/nebo nedeformujte, nezahřívejte ani nerozebírejte.

VAROVÁNÍ!

Nedovolte, aby zařízení používal kdokoli, kdo není seznámen s návodem k použití. Toto zařízení mohou používat děti starší 8 let, stejně jako osoby s omezenými fyzickými, smyslovými nebo mentálními schopnostmi či nedostatkem zkušeností a znalostí, pokud jsou pod dohledem nebo byly poučeny k bezpečnému používání zařízení a porozumí z toho vyplývající a související nebezpečí. Děti si s tímto zařízením nemohou hrát.

Úklid a údržbu uživatelem nesmí provádět děti, pokud nejsou starší 8 let a nejsou pod dohledem.

Zařízení by mělo být uchováváno mimo dosah dětí mladších 8 let. Zařízení není dětskou hračkou. **NEBEZPEČÍ ZRANĚNÍ!**

NEBEZPEČÍ! NEBEZPEČÍ CHEMICKÝCH POPÁLENIN A POPÁLENIN KVŮLI ÚNIKU BATERIÍ!

- Zařízení je napájeno dobíjecí baterií. Zařízení uchovávejte na bezpečných místech, kam nemají přístup ani děti, ani zvířata.
- Baterii nikdy neotevírejte.
- Uniklá bateriová kyselina může vést k chemickým popálením.

- Vyhňte se kontaktu bateriové kyseliny s kůží, očima a sliznicemi.
- V případě úniku bateriové kyseliny si vždy nasadte ochranné rukavice.
- V případě kontaktu s bateriovou kyselinou postižené místo okamžitě opláchněte velkým množstvím čisté vody a vyhledejte lékaře.

NEBEZPEČÍ!

- Nepoužívejte čistič pórů, pokud je jeho pouzdro poškozené.
- Nepřipojujte zařízení k napájecímu zdroji za účelem nabíjení, pokud má přístroj, USB nabíjecí kabel nebo napájecí adaptér (není součástí balení) viditelné poškození.
- V případě poškození zařízení, krytu a krytek, zařízení musí být odpojeno od elektrického obvodu.
- V případě nebezpečí nebo závady okamžitě vytáhněte síťovou zástrčku ze zásuvky.
- Toto zařízení obsahuje baterii, kterou může používat pouze kvalifikovaný odborník. Otevřete zařízení na výměnu baterie, pokud již nefunguje nebo se rychle vybíjí. Obratťe se na prodejce, u kterého jste přístroj zakoupili.
- Nikdy se nepokoušejte zařízení opravovat sami. Pokud vaše zařízení nefunguje správně, kontaktujte prodejce, kde jste zařízení koupili.
- K opravám lze použít pouze díly odpovídající původním údajům zařízení. Tento produkt obsahuje součásti, které jsou nezbytné pro ochranu před nebezpečím.
- Poškozené komponenty vyměňujte pouze za vhodné originální náhradní díly.
- Nikdy nepoužívej vadné zařízení.
- Nikdy nepoužívejte zařízení, které spadlo.
- Nikdy neotvírejte kryt.
- Pokud je nabíjecí kabel poškozen, smí jej opravit pouze výrobce nebo výrobce autorizovaný tímto výrobcem.
- Zákaznický servis nebo kvalifikovaný specialista (elektrotechnik), aby se vyhnuli nebezpečí.
- Nepoužívejte prodlužovací kabely, vícenásobné zásuvky ani adaptéry pro připojení spotřebiče k elektrické síti.
- Je nutné použít zásuvku, která je řádně uzemněna a je určena výhradně pro toto zařízení. V opačném případě může dojít k nebezpečným nehodám nebo poškození zařízení.

NEBEZPEČÍ!

- Při vybalování se ujistěte, že součásti obalu (polyethylenové sáčky, polystyrenové kusy) nejsou v dosahu dětí.

NEBEZPEČÍ UDUŠENÍ!

- Pokud je některá součást zařízení poškozena, vyhněte se otevřenému ohni a zdrojům vznícení. Okamžitě kontaktujte zákaznický servis.
- Neprovádějte na zařízení žádné úpravy.
- Zařízení nikdy neponožujte do vody ani jiných kapalin, nečistěte jej pod tekoucí vodou. Dbejte na to, aby do USB konektoru nevnikla vlhkost. **NEBEZPEČÍ ZKRATU!**
- Neumísťujte zařízení ani USB kabel na místo, kde by mohlo dojít ke kontaktu s vodou nebo deštěm.
- Pokud kapalina pronikne do zařízení, okamžitě ho vypněte!
- Čistič pórů by nikdy neměl být zakrytý látkami, dekami apod. **NEBEZPEČÍ POŽÁRU!**
- Nevystavujte zařízení extrémním podmínkám, jako jsou:
 - Vysoká vlhkost nebo mokro
 - Extrémní teploty
 - Přímé sluneční záření
 - Otevřený oheň
- Nepřipojujte zařízení k napájení zdroji, dokud úplně neodstraníte všechny obalové komponenty a přepravní zajištění.
- Spotřebič nabíjejte pouze pomocí vhodného, schváleného USB nabíječe, jehož výstupní hodnoty SELV odpovídají vstupním hodnotám uvedeným na spotřebiči.
- Během nabíjení zařízení musí být síťová zástrčka i uzemněná zásuvka po celou dobu zapojeny.
- Technické údaje vašeho elektrického zdroje musí být odpovídají hodnotám uvedených na výrobním štítku.
- Elektrický okruh ve vaší domácnosti musí být vybaven jističem umožňující nouzové odpojení přístroje.

POZOR!

- Při vybalování si zapamatujte polohu všech částí zařízení, pro případ, že ho budete muset znovu zabalit a převézt.
- Zařízení nepoužívejte dříve, dokud nejsou všechny jeho součásti umístěny správně na svých místech.

VAROVÁNÍ! NEBEZPEČÍ ZRANĚNÍ!

- Nepokládejte zařízení na okraj stolu, aby nespadlo. Ujistěte se, že je zařízení stabilní. Se zařízením zacházejte opatrně.
- USB nabíjecí kabel vedťe tak, aby se k němu odstraňovač černých teček během nabíjení náhodou nedotkl a nemohl být stržen dolů. USB nabíjecí kabel nesmí být ohnutý ani zmačknutý
- USB nabíjecí kabel držte dál od ostrých hran a zdroje tepla.

- Uskladněte zařízení tak, aby se neponořilo do vody nebo umyvadla.
- Pokud zařízení spadne do vody, nikdy po něm nesahejte
- Zařízení okamžitě odpojte, pokud je zařízení v režimu nabíjení.
- Pokud je Čistič pórů již poškozený, zařízení nepoužívejte.
- Nepoužívejte ani se nedotýkejte čističe pórů mokřýma rukama.
- Vypněte čistič pórů, pokud zařízení chcete čistit nebo když ho nepoužíváte.
- Chcete-li zařízení zcela odpojit od elektrické sítě, nabíjecí kabel lze vytáhnout ze zásuvky. Nikdy netahat za nabíjecí kabel při vytahování zástrčky ze zásuvky, ale vždy uchopťe za zástrčku.
- Nikdy nepoužívejte nabíjecí kabel jako rukojeť na přenášení.
- I když je zařízení vypnuté, napětí je v něm, pokud je napájecí zástrčka zapojena do zásuvky.
- Spotřebič je odpojen od sítě pouze tehdy, když zástrčka je vytažena.
- Bouřky mohou poškodit elektrické spotřebiče. Doporučujeme, abyste zařízení během bouřky nenabíjeli z elektrické sítě.
- Vypněte nebo odpojte zařízení, pokud do něj vniknou cizí předměty.
- Nepoužívejte zařízení, pokud máte jedno nebo více z následujících onemocnění nebo stavů: srdeční onemocnění, roztroušenou sklerózu, cukrovku, autoimunitní onemocnění, rakovinu kůže, onemocnění krevního oběhu, kožní onemocnění jako herpes, cévní onemocnění, kuperózu, růžovku, popraskaná kůže, záněty, ekzém, rány, otoky, spáleniny od slunce, podráždění kůže.
- Nepoužívejte zařízení po kosmetické operaci v oblasti obličeje.
- Za žádných okolností se nesmí sací hlavice ani připojený nástavec dostat do očí, na rty, bradavky nebo do genitální oblasti!
- Nepoužívejte zařízení, pokud užíváte léky na ředění krve nebo léky obsahující steroidy. Okamžitě ukončete léčbu zařízením, pokud pocítíte nepřímenné pocity nebo bolest.
- Nadměrné používání může vést k alergickým reakcím na kůži, jako jsou modřiny, otoky nebo prasklé žilky. V případě pochybností se zeptejte svého lékaře, zda je léčba odstraňovačem černých teček pro vás vhodná.
- Nikdy nepoužívej čistič pórů bez nástavce.
- Aplikace by neměla trvat déle než 5 minut v kuse. První ošetření by nemělo trvat déle než 3 minuty. Neošetřujte stejnou oblast příliš dlouho ani příliš intenzivně, a ne několikrát za sebou.
- Dlouhé vlasy držte v bezpečné vzdálenosti od přístroje.

VAROVÁNÍ! NEBEZPEČÍ POŠKOZENÍ!


- Dbejte na to, aby se do krytu přístroje čističe pórů nedostaly žádné nevhodné předměty.
- Nevystavujte předmět silným nárazům a chraňte jej před prachem, vlhkostí a přímým slunečním zářením a extrémními teplotami.
- Čistič pórů není voděodolný. Nepoužívejte zařízení při sprchování nebo koupání.
- Při vybalování a používání nepoužívejte žádné špičaté nebo ostré předměty.
- Povrch čističe pórů by neměl být vystaven žádnému tlaku, jinak může dojít k jeho poškození.
- Nesprávné čištění zařízení může vést k jeho poškození. Vyhněte se používání agresivních čistících prostředků, čistících zařízení s kovovými nebo nylonovými štětinami a nástrojů s ostrými nebo kovovými hranami.

2 CO JE V KRABICI

Po vybalení se ujistěte, že jsou zahrnuty následující díly:

- Čistič pórů
- USB nabíjecí kabel (USB-A na USB-C)
- 5 x nástavců
- 15 x náhradních filtrů
- 2 x náhradní uzamykací kroužky
- Návod k použití se zárukou

3 SOUČÁSTI ZAŘÍZENÍ

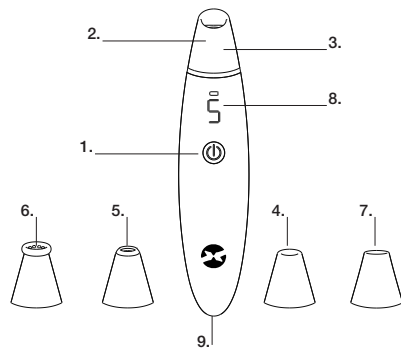

- Tlačítko zapnutí/vypnutí a pětistupňový sací výkon
- Sací hlava
- Čistící nástavec s liftingovým efektem (silné sání)
- Standardní sací náplň (střední sání)
- Silikonový čistící nástavec (nízký sání)
- Silikonová masážní nástavba (nízká savost)
- Ovalná beauty attachment (nízká savost)
- Zobrazení úrovně nabití baterie a zvoleného výkonu
- Konektor pro USB nabíjecí kabel

4 INSTALACE

4.1 Rozbalování

VAROVÁNÍ! NEBEZPEČÍ POŠKOZENÍ!

Při vybalování zařízení nepoužívejte špičaté nebo předměty s ostrými okraji.

- Opatrně vybalte zařízení. Vezměte prosím na vědomí informace o likvidaci obalových materiálů v kapitole 10 – LIKVIDACE.
- Zařízení může být chráněno při přepravě přepravními pojistkami. Ty zcela odstraňte. K odstranění případných zbytků nepoužívejte agresivní čistící prostředky.
- Před použitím zařízení čističe pórů zkontrolujte, zda zařízení

- není poškozené.
- Zkontrolujte, zda je obsah balení kompletní, viz kapitola 2 – ROZSAH DORUČENÍ.

4.2 Čištění

VAROVÁNÍ!

Před každým čištěním přístroje musí být Čistič pórů vypnutý. **NEBEZPEČÍ ÚRAZU ELEKTRICKÝM PROUDEM!**

Nikdy neponožujte zařízení ani napájecí USB kabel do vody nebo jiných kapalin.

- Vnější povrch čističe pórů a nástavců vyčistěte teplou vodou a běžným prostředkem na mytí nádobí.
- Pak vyčištěné části osušte měkkým hadříkem.

5 SLUŽBA

5.1 NABÍJENÍ BATERIE

NEBEZPEČÍ!

Při nabíjení baterie čističe pórů vezměte prosím na vědomí:

- Čistič pórů nesmí být vkládán do koupelny ani do vlhkých místností.
- Pokud je Čistič pórů mokrý, nechte ho dobře uschnout, před dalším připojením s USB kabelem. Připojte nabíjecí kabel k síti.
- Neumísťujte nádoby naplněné kapalinou, například: květinové vázy, na přístroj nebo v jeho bezprostřední blízkosti. Nádobas se může převrhnout a kapalina může ohrozit elektrickou bezpečnost. Hrozí nebezpečí úrazu elektrickým proudem.
- K nabíjení používejte pouze vhodné síťové adaptéry (nejsou součástí balení): AC síťový adaptér třídy ochrany schválený pro použití s domácími spotřebiči s výstupním napětím 5V a výstupním proudem max 1A.
- Během nabíjení se síťový adaptér (který není součástí balení) znatelně zahřívá. To je normální.
- Nepoužívejte vadné nabíječky a nepokoušejte se je opravovat.
- Nepřipojujte Čistič pórů k napájen, pokud má samotné zařízení nebo USB nabíjecí kabel viditelné poškození.

Proto před prvním použitím plně nabijte ze sítě pomocí síťového adaptéru (není součástí balení). Zařízení nelze používat při nabíjení.

- Zapojte jeden konec USB nabíjecího kabelu do konektoru čističe pórů.
- Druhý konec USB nabíjecího kabelu připojte pomocí vhod-ného síťového adaptéru (není součástí součástí) do zásuvky. Během nabíjení se kontrolka nabíjení rozsvítí červeně. Běžné nabíjení trvá asi 2 hodiny s vybitou baterií. Jakmile je baterie plně nabitá, kontrolka nabíjení se rozsvítí zeleně.
- Po nabití odpojte síťový adaptér (není součástí balení) ze zásuvky a odpojte USB nabíjecí kabel z čističe pórů. S plně nabitou baterií můžete používat Čistič pórů asi 90 minut. Pokud Čistič pórů ukazuje nízkou úroveň baterie, je nutné baterii plně znovu nabít.

5.2 Nasazení požadovaného nástavce na sací hlavici

- Filtr a zajišťovací kroužek jsou již předem namontovány na zařízení.
- K dispozici je 5 různých nástavců:
 - Čistící nástavec s liftingovým efektem (silné sání)
Pro odstranění černých teček, mastnoty, prachu, zbytků make-upu atd.
Aplikace: Podle stavu pokožky použijte jednu týdně po dobu asi 5 minut. Nepoužívejte v okolí očí.
Nástavec lze také použít na části těla, například na lokty. Dávejte pozor, abyste nástavec nedrželi na jednom místě příliš dlouho, protože silný sací tlak může způsobit modřiny nebo podráždění pleti.
 - Standardní sací náplň (střední sání)
pro odstranění černých teček.
Aplikace: Podle kožního stavu jednou týdně po dobu asi 5 minut.
Tento nástavec je o něco šetrnější než velký nástavec a je vhodný pro běžné čištění obličeje s mírně až středně uc-panými póry. Opět buďte opatrní, abyste zařízení nedrželi na jednom místě příliš dlouho, abyste předešli podráždění pleti nebo modřinám.
 - Silikonový čistící nástavec (nízký sání)
pro odstranění prachu, mastnoty a zbytků make-upu.
Tato nástavec je velmi šetrný a je zvláště vhodný pro citlivější pokožku nebo pro pravidelné, jemné čištění.
Silikonová masážní nástavba (nízká savost)
Pro jemnou masáž obličeje a podporu vstřebávání pleťových přípravků.
 - Oválný kosmetický nástavec (nízká savost)
Pro každodenní péči o pleť a jemné ošetření obličeje, zejmé-na v oblastech s jemnými vráskami, jako je okolí očí a úst.

5.3 Použití

- Aplikace:
 - Přiložte nástavec krátce na pleť a pak jej hned sundejte.
 - Tento proces opakujte několikrát, aniž byste nástavec dlouho drželi na jednom místě.
 - Pro jemný zpevňující účinek můžete postupovat zdola nahoru.
- Vhodné pro:
 - Tváře
 - Oblast očí (opatrně, a ne přímo na víčko)
 - Nosní dírky
 - Oblast úst (ne přímo na rtech)
- Poznámka: Tento nástavec je určen pro jemnou masáž a péči, nikoli pro odstranění černých teček. Protože je kůže kolem očí velmi citlivá, Je nutné používat pouze nízké sání a velmi krátké pohyby, aby se zabránilo podráždění nebo modřinám.

5.3 Použití

- Změkčete póry obličeje zvlhčením obličeje vlažnou vodou a následným osušením.
- Čistič pórů by měl být používán pouze na čistou, a suchou pleť bez make-upu. Před použitím nepoužívejte peelingy na obličej.
- Zařízení s nasazeným nástavcem zapněte dlouhým stisknutím tlačítka zapnutí/vypnutí.
- Nastavte požadovanou sílu sání:
 - Stiskněte tlačítko zapnutí/vypnutí jednou: Sací úroveň 1 (začátečník, pro citlivou a suchou pleť)
 - Stiskněte dvakrát: Sací úroveň 2 (pro citlivou a suchou pokožku)
 - Stiskněte třikrát: Sací úroveň 3 (pro normální pleť)
 - Stiskněte čtyřikrát: Sací úroveň 4 (pro odolnou nebo mastnou pokožku a pro odolné černé tečky – používejte opatrně, protože vysoký sací výkon může rychle vést k podráždění nebo ke vzniku modřin)
 - Stiskněte pětkrát: Sací úroveň 5 (pro odolnou nebo velmi mastnou pokožku a velmi odolné černé tečky – používejte opatrně, protože vysoký sací výkon může rychle vést k podráždění nebo ke vzniku modřin)

- Při první aplikaci začněte s nejnižším nastavením sání. V případě potřeby, můžete postupně zvyšovat sací sílu. Umístěte zařízení na oblast ošetřované pleti a pomalu a rovnoměrně po ní přejíždějte, abyste odstranili černé tečky a nečistoty. Nevyvíjejte na zařízení tlak. Aby se nástavec přilnul k pleti a nevsával vzduch ze vnějšíku, ujistěte se, že je pleť napnutá. V případě potřeby, jednou

- rukou mírně napněte ošetřenou část pleti, zatímco druhou rukou přejíždějte přístrojem po pokožce.
- Nikdy nenechávejte zařízení na stejném místě déle než 2 sekundy, abyste předešli podráždění kůže nebo modřinám.
- Pro vypnutí odstraňovače černých teček podržte dlouhým stiskem tlačítko napájení.
- Po očištění doporučujeme použít jemné tonikum. Následně se doporučuje hydratační pleťová maska nebo opláchnutí studenou vodou pro zklidnění pokožky.
- Pokud je kůže po aplikaci červená, je to obvykle normální. Zarudnutí obvykle odezní během 1–2 dnů. V tomto období se vyhněte saunám, soláriím a slunci.
- Podle typu pleti by se přístroj neměl používat více než 1-2krát týdně.

6 VYŘAZENÍ Z PROVOZU

⚠ NEBEZPEČÍ!

NEBEZPEČÍ POPÁLENIN A/NEBO POŠKOZENÍ!

- Pokud zařízení nepoužíváte delší dobu, Doporučujeme jej uložit na bezpečném místě.
- Pokud je Čistič pórů používán nesprávně nebo nesprávně uložen, mohou z baterie uniknout škodlivé kapaliny (elektrolyty). Vyhněte se jakémukoli kontaktu s unikající baterií a unikajícími látkami, protože ty mohou způsobit popáleniny, chemické popáleniny a kožní reakce.
 - Nikdy nedovolte, aby unikající kapaliny z baterie přišly do kontaktu s očima, sliznicemi nebo pokožkou.
 - Pokud se s tekutinou stále dostanete do kontaktu, umyjte pos-tižené místo vodou a v případě potřeby vyhledejte lékaře.

- Čistič pórů a nástavce by měly být předem vždy vyčištěny – viz kapitola 7 ČISTĚNÍ A PÉČE.
- Zařízení uchovávejte na bezpečném místě, mimo dosah dětí a zvířat.

7 ČISTĚNÍ A PÉČE

⚠ VAROVÁNÍ!

NEBEZPEČÍ POPÁLENIN!

- Zařízení se může během používání velmi zahřívat. Před každým čištěním je třeba nechat zařízení zcela vychladnout.

⚠ VAROVÁNÍ!

Před každým čištěním musí být přístroj vypnutý.

NEBEZPEČÍ ZKRATU!

- Nikdy neponořujte zařízení nebo USB kabel do vody nebo jiných kapalin, nečistěte je pod tekoucí vodou.
- Dbejte na to, aby se při čištění do pouzdra nedostaly žádné tekutiny.
- Dbejte na to, aby do USB konektoru nevnikla vlhkost.

Špatná čistota zařízení může poškodit jeho povrch, což ovlivňuje délku životnosti a může vést k nebezpečným situacím. Proto pravidelně čistěte Čistič pórů.

Nepoužívejte agresivní hrubé čističe, špičaté nebo ostré nástroje k čištění zařízení, protože mohou poškrábat a zničit povrchy.

- Před každým čištěním vypněte čistič pórů.
- Před čištěním musí být zařízení zcela vychlazeno.
- Vyčistěte čistič pórů a jeho nástavce teplou vodou běžně dostupnými prostředky na mytí nádobí. Pak vyčištěné části osušte měkkým hadříkem.
- Čištění nástavců / filtrů / uzamykacích kroužků: Sundejte použitý nástavec a sundejte použitý filtr i těsnící kroužky na sací hlavě. Filtry a uzamykací kroužky lze použít několikrát. Po použití umyjte nástavec a filtr i pojistné kroužky ve vlažné vodě a nechte je uschnout před dalším použitím. Pokud je filtr stále znečištěný nebo poškozený, použijte nový filtr. Pokud se pojišťovací kroužky při čištění přetrhnou, použijte náhradní pojišťovací kroužky, které jsou součástí.

Výměna filtru

- Pomocí pinzety vyjměte znečištěný filtr ze sacího kanálu sací hlavice.
- Vložte nový filtr do sací hlavice. Filtr musí být správně zasunut do
- sacího kanálu, aby zařízení správně fungovalo.
- Ujistěte se, že je silikonový zajišťovací kroužek na sací hlavici

- správně nasazen.
- Na sací hlavici nasadte požadovaný nástavec.

8 PORUCHA A NÁPRAVA

⚠ NEBEZPEČÍ!

- Nikdy se nepokoušejte zařízení opravovat sami. Pokud vaše zařízení nefunguje správně, kontaktujte prodejce, kde jste zařízení koupili.
- Nikdy nepoužívejte vadné zařízení.
- Nikdy nepoužívejte zařízení, které spadlo.

Pokud během provozu dojde k poruchám, zkontrolujte prosím následující tabulku, zda si můžete problém sami opravit. Všechny ostatní opravy jsou nepřipustné a reklamace na záruku vyprší.

Problém	Možné Příčina	Akce
Zařízení nelze zapnout	Baterie není nabitá.	Nabijte baterii. Viz ka-pitola 5.1 – NABÍJENÍ BATERIE
Filtrační papír není správně nasazen	Na sací hlavici není nasazen zajišťovací kroužek	Použijte dodané zajišťovací kroužky správně je umístěte na sací hlavici

10 LIKVIDACE

- Při vybalování se ujistěte, že součástí obalu (polyethylenové sáčky, polystyrenové kusy) nedostaly do blízkosti dosahu dětí. **NEBEZPEČÍ UDUŠENÍ!**
- Staré přístroje, které již nejsou používány, musí být odeslány do odpovědného recyklačního centra. Za žádných okolností nevystavujte otevřenému ohni.
- Vysloužilé přístroje nejsou běžným odpadem. Jejich ekologi-ckou likvidaci lze získat zpět mnoho cenných surovin.
- Při likvidaci elektrických zařízení na skládkách mohou nebezpečné látky pronikat do podzemních vod. Tyto látky se následně mohou dostat do potravního řetězce a negativně ovlivnit vaše zdraví i životní prostředí.
- Před likvidací přístroj vždy znefunkčňte. To znamená, že je nutné vyjmout baterie a zlikvidovat je odděleně.
- Materiály použité při výrobě přístroje jsou recyklovatelné a jsou příslušně označeny. Správnou likvidací přístroje, jeho materiálů i obalu významně přispíváte k ochraně životního prostředí.
- Obalový materiál zlikvidujte v souladu s místními předpisy a uložte jej do určených sběrných nádob.
- Pokud ve vašem obytném prostoru nejsou vhodné kontejnery na likvidaci, odneste tyto materiály na vhodné městské sběrné místo.
- Podrobnější informace získáte u svého prodejce nebo u příslušných místních orgánů zajišťujících nakládání s odpady.



Likvidace obalů

Obal zlikvidujte podle jednotlivého druhu materiálu. Karton a lepenku odevzdejte do sběru papíru, fólie do sběru pro recyklaci (tříděného odpadu).



Správná likvidace použitého elektrického a elektronického vybavení (Elektronický odpad): Symbol přeškrtnutého odpadkového koše označuje potřebu oddělené likvidace elektrických a elektronických zařízení. Podle evropských předpisů již použité elektri-cké a elektronické zařízení nesmí být považováno za běžný domácí odpad, ale musí být odevzdáno na vhodné zřízeném sběrném místě pro recyklaci takového vybavení. Společnosti zabývající se nakládáním s komunálním odpadem zřídily pro tento účel sběrná místa, kde domácnosti mohou bezplatně odevzdat svá vysloužilá zařízení. Informace o možnostech odevzdání ve vašem regionu získáte na obecním úřadě nebo u místní společnosti zajišťující odpadové hospodářství.



Baterie a dobíjecí baterie nesmí být vyhazovány do domácího odpadu!

Baterie a dobíjecí baterie nesmí být vyhazovány do do-máčího odpadu. Jako spotřebitel jste ze zákona povinni správně likvidovat použité a dobíjecí baterie, bez ohledu

na to, zda obsahují škodlivé látky či nikoliv. Pokud možno prosím před dobíjením vyjměte všechny baterie a dobíjecí baterie před likvidací zařízení a odevzdejte je na určených sběrných místech nebo v obchodech, aby je bylo možné zlikvido-vat šetrným způsobem k životnímu prostředí. Baterie a akumulátory lze bezplatně odevzdat na sběrném místě ve vaší obci nebo v obchodech, aby mohly být zlikvidovány ekologicky šetrným způsobem a také k získávání cenných surovin. Pokud je nesprávně likvidováno, toxické látky mohou být uvolněny do životního prostředí, což mají škodlivé účinky na lidi, zvířata i rostliny. Vhazujte baterie a akumulátory pouze pokud jsou vybité. Pokud je to možné, používejte akumulátory namísto jednorázových baterií. Baterie se zvýšeným obsahem škodlivých látek jsou také označeny následujícími symboly: Cd = kadmium, Hg = rtuť, Pb = olovo

⚠ NEBEZPEČÍ!

ŠKODY NA ŽIVOTNÍM PROSTŘEDÍ A ZDRAVÍ!

Použité baterie mohou obsahovat znečišťující látky nebo těžké kovy, které mohou být škodlivé pro životní prostředí a zdraví. Látky nebezpečné pro zdraví se mohou dostat do podzemních vod. Takové látky tak vstupují do potravního řetězce a škodí našemu zdraví a pohodě. Kromě toho baterie obsahují cenné suroviny, které lze znovu využít ekologicky šetrnou likvidací.



- NEBEZPEČÍ VÝBUCHU!**
- Baterie a dobíjecí baterie obsahující lithium (Li = lithium) musí být správně zlikvidovány. **NEBEZPEČÍ POŽÁRU!**
- Nesprávná likvidace může vést ke zkratům v důsledku tepla nebo poškození. Hrozí **NEBEZPEČÍ POŽÁRU A NEBEZPEČÍ VÝBUCHU!**
- Aby se předešlo možným zkratům, měli byste pólové svorky baterií a akumulátorů obsahujících lithium zalepít lepicí páskou.
- Před likvidací je nutné vyjmout baterie a dobíjecí baterie ze zařízení a měly by být zlikvidovány odděleně. Před likvidací se ujistěte, že jsou baterie a akumulátory vybité.

11 ZÁRUKA VÝROBCE

- Na tento přístroj poskytujeme zákonnou odpovědnost za vady po dobu 2 let a běžnou obchodní záruku počínaje datem vysta-vení faktury nebo dodacího listu.
- Během této záruční lhůty, po předložení dokladu o koupi nebo dodacího listu, budou všechny výrobní a/nebo materiálové vady, které nastanou, bezplatně vyřešeny opravou a/nebo výměnou vadných dílů, případně (dle našeho uvážení) výměnou za rovnocenný výrobek bez vad.
- Výrobce neodpovídá za újmu na zdraví ani za věcné škody vzniklé v důsledku nesprávného používání nebo nedostatečné údržby.
- Snadno rozebitné části, jako je sklo, plast nebo lampy, nejsou zahrnuty v záruce.
- Záruka zaniká, pokud přístroj otevřete vy nebo třetí osoba, která k tomu nebyla námi oprávněna, nebo pokud na přístroji provedete jakékoli úpravy.
- Při použití v rozporu s určeným účelem nelze zaručit bezpečnost ani správnou funkci přístroje a zanikají veškeré nároky ze záruky.
- Jakékoli použití, které není popsáno v tomto návodu k použití, je nepřipustné a vede ke ztrátě práv z odpovědnosti za vady, záruky i odpovědnosti výrobce.
- Vyhrazujeme si právo na tiskové chyby a změny přístroje, návodu k použití i obalu.

5.3.1 Jak získat náhradu za vadu? Jak získat náhradu za vadu? Jak získat náhradu za vadu?

Pokud chcete podat stížnost, obecně doporučujeme nejprve kon-taktovat prodejce, od kterého jste zařízení koupili.

Pokud je oprava nutná, můžete se na naši linku obrátit na násle-dující číslo
Provozní číslo: +49 (0)6831 505 98 97.

Technický servis

Jaxmotech GmbH
Ostring 60
66740 Saarlouis
Germany
E-mail: service@jaxmotech.de

5.3.1 Jak získat náhradu za vadu? Jak získat náhradu za vadu? Jak získat náhradu za vadu?


Jaxmotech GmbH
Ostring 60
66740 Saarlouis
Germany
Service Hotline: +49 (0)6831 5059897
service@jaxmotech.de
www.jaxmotech.de

INSTRUCTION MANUAL



BR 2198

Blackhead Remover

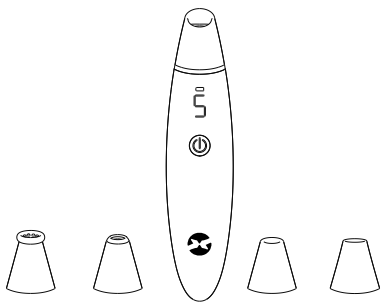



Please read the entire user manual, especially the safety instructions, before using the device for the first time. Keep this instruction manual in a safe place for future use. If you pass on the device, you must also hand over this operating manual.

This instruction manual is also available for download in an electronic format:
www.jaxmotech.de/downloads

Or contact us. We will be happy to send you the operating instructions as an electronic PDF file.
E-mail: service@jaxmotexch.de
Phone: +49 (0)6831 505 9800

EC – DECLARATION OF CONFORMITY

The product described in this instruction manual complies with all relevant harmonised requirements of the EU. The complete Declaration of Conformity can be found on our website: www.jaxmotech.de/downloads.

The illustrations contained in this instruction manual may differ from the actual design of your device. In such cases follow the facts described. The manufacturer reserves the right to make such changes that do not affect the functioning of the device. The device you purchased may have been changed and may therefore have differences from the operating instructions. Nevertheless, the functions and operating conditions are identical, so that you can use the operating instructions to the full extent.

Technical changes or printing errors are reserved.

 Products marked with the „CE“ symbol comply with all applicable Community regulations of the European Union economic area.

1 SAFETY INSTRUCTIONS
Please read the safety instructions carefully before using the device. The information contained herein are for the purpose to protect your health and the device. Failure to follow the safety instructions may result in serious adverse effects on your health and damage to your device.

Intended use
The blackhead remover – SEG model BR 2198 – is intended to be a cosmetic instrument for facial skin care. Vacuum technology is be used to cleanse the facial skin deep into the pores and treat blackheads. Dead skin cells are removed and blood circulation is stimulated.

The device is exclusively for private use and not for commercial use. Do not use the device on animals. It is not intended for use in medical/therapeutic facilities.

The device is intended exclusively for the operation indoors. Operate the device only in the sense of its intended use. In the event of improper use, the safety and functionality of the device can no longer be guaranteed and any warranty claim expires.

Explanation of the symbols used

 **DANGER!**
refers to a dangerous situation which, if not averted, poses an immediate threat to life and health.

 **WARNING!**
refers to a dangerous situation which, if not averted, may pose possible imminent danger to life and health.

 **CAUTION!**
refers to a dangerous situation which, if not averted, may result in moderate or minor injuries.

 **NOTE!**
refers to a dangerous situation which, if not averted, results in possible damage to the device.

-  **WARNING!**
EXPLOSION HAZARD!
- Incorrect storage of the device with an integrated rechargeable battery can lead to explosions, as batteries are highly flammable. Therefore, keep the device and the USB charging cable away from heat sources (e.g. hotplates, gas flames, heating, direct sunlight).
 - Do not place open sources of fire such as burning candles near the item. Candles and other open flames must be kept away from the item at all times to prevent the spread of fire.
 - Do not place the blackhead remover in direct sunlight.
 - The built-in rechargeable battery cannot and must not be replaced by the user. If the built-in battery is not replaced properly, there is a risk of explosion.
 - Replacement only with the same or equivalent battery type. If the battery is defective, contact a specialist workshop.
 - The article contains a lithium-ion battery. This must not be taken apart, thrown into fire or short-circuited.
 - Do not alter and/or deform/heat/disassemble built-in batteries.

 **WARNING!**
Do not allow anyone who is not familiar with the user manual to use the device. This device can be used by children aged below 8 years, as well as by persons with reduced physical, sensory or mental abilities or lack of experience and knowledge, if they are supervised or have been instructed in the safe use of the device and understand the resulting dangers. Children are not allowed to play with the device.

Cleaning and maintenance by the user may not be carried out by children unless they are 8 years of age or older and are supervised.

The device should be kept away from children younger than 8 years of age. The device is not a children’s toy. **RISK OF INJURY!**

-  **DANGER!**
RISK OF CHEMICAL BURNS AND BURNS DUE TO LEAKING BATTERIES!
- The device is powered by a built-in rechargeable battery. Keep the device in safe places where children and animals have no access to.
 - Never open the battery.
 - Leaked battery acid can lead to chemical burns.
 - Avoid contact of battery acid with skin, eyes and mucous

- membranes.
- In the event of a leaking battery, be sure to wear protective gloves.
- In case of contact with the battery acid, rinse the affected place immediately with plenty of clear water and consult a doctor.

-  **DANGER!**
- Do not use the blackhead remover if the housing is damaged.
 - Do not connect the device to the power supply for charging if the device, the USB charging cable or the power plug (not included in content) has visible damage.
 - In case of damage of the device, the housing and covers, the device must be disconnected from the electrical circuit.
 - In the event of danger or a defect, pull immediately the mains plug from the socket.
 - This device contains a battery that can only be replaced by a qualified professional. Do not open the device to replace the battery if it no longer charges or it discharges quickly. Contact the retailer from whom you purchased the device.
 - Never try to repair the device yourself. If your device is not working properly, contact the retailer where you purchased the device.
 - Only spare parts that correspond with the original device data may be used for repairs. This product contains parts that are essential to protect against hazards.
 - Replace damaged components only with suitable original spare parts.
 - Never use a defective device.
 - Never operate a device that has been dropped.
 - Never open the case.
 - If the charging cable is damaged, it must be repaired only by the manufacturer, customer service or similarly qualified persons (electrician) in order to avoid hazards.
 - Do not use power strips, multiple sockets or extension cords to connect the appliance to the power supply.
 - You will need a safety socket that is properly earthed in accordance with the mains plug and is dedicated exclusively to this appliance. Otherwise, it can lead to dangerous accidents or damage to the device.

-  **DANGER!**
- When unpacking, make sure that the components of the packaging (polyethylene bags, polystyrene pieces) should not be within the reach of children. **DANGER OF SUFFOCATION!**

- If a system part is damaged, avoid open flames and ignition sources. Contact immediately your customer service.
- Do not make any changes to the device.
- Never immerse the device in water or other liquids, do not clean it under running water. Make sure that no moisture enters the USB connection socket. **DANGER OF SHORT CIRCUIT!**
- Do not place the device or USB cable in a place where it will come into contact with water/rain.
- If liquid penetrates the device, switch off the device immediately!
- The blackhead remover should never be covered with cloths, blankets, etc. **FIRE HAZARD!**
- Do not expose the device to extreme conditions, such as:
 - High humidity or wetness
 - Extreme temperatures
 - Direct sunlight
 - Open fire
- Do not connect the device to the power supply for charging until you have completely removed all packaging components and transport locks.
- Only charge the appliance using a suitable, approved USB charger whose SELV output rating matches the input rating specified on the appliance.
- During charging the mains plug and the earthed socket must be easily accessible at all times.
- The technical data of your electrical supply must correspond to the values indicated on the rating label.
- Your home circuit must be connected to a circuit breaker for emergency shutdown of the device.


-  **CAUTION!**
- Remember the positions of all parts of the device when you unpack it, in case you need to pack it up and transport it again.
 - Do not use the appliance until all of its parts are properly in their intended locations.

-  **WARNING!**
RISK OF INJURY!
- Do not place the device on the edge of a table to avoid falling off. Make sure that the device is stable. Use the device carefully.
 - During charging, position the USB charging cable so that the black head remover cannot be accidentally pulled down.
 - The USB charging cable must not be bent or crushed.
 - Keep the USB charging cable away from sharp edges and heat

- sources.
- Store the device so that it does not fall into a tub or sink.
- If the device falls into water, never reach for the product. Unplug immediately if the device is in charging status.
- If the blackhead remover is already damaged, do not use the device.
- Do not use or touch the blackhead remover with wet hands.
- Turn off the blackhead remover when you want to clean the device or when you are not using it.
- To completely disconnect the device from the mains, the charging cable should be pulled out of the socket. Never pull the charging cable when you want to unplug it from the socket, but always grab the plug.
- Never use the charging cable as a carrying handle.
- Even when the device is switched off, there is voltage as long as the power plug is plugged into the socket.
- The appliance is only disconnected from the mains when the power plug is pulled.
- Thunderstorms can damage electrical appliances. We recommend that you do not charge the device during a thunderstorm.
- Turn off or disconnect the device if foreign objects enter the device.
- Do not use the device if you have one or more of the following diseases or conditions: heart disease, multiple sclerosis, diabetes, autoimmune diseases, skin cancer, circulatory disorders, skin diseases such as herpes, vascular diseases, couperose, rosacea, skin cracks, inflammation, eczema, wounds, swelling, sunburn, skin irritation.
- Do not use the device after cosmetic surgery on the face.
- Under no circumstances should you use the device on eyes, lips, nipples or genital area.
- Do not use the device if you are taking blood thinners or medications containing steroids. Discontinue treatment with the device immediately if you find it uncomfortable or are in pain.
- Overuse can lead to allergic reactions on the skin, such as bruising, swelling or broken capillaries. If in doubt, ask your doctor whether treatment with the blackhead remover is suitable for you.
- Never use the product without an attachment.
- An application should not last longer than 5 minutes continuously. The first treatments should not exceed 3 minutes. Do not treat the same area too long or too vigorously and not several times in a row.
- Keep long hair away from the device.

-  **WARNING!**
RISK OF DAMAGE!
- Make sure that no improper items are in the housing of the blackhead remover.
 - Do not expose the item to violent shocks and protect it from dust, moisture, direct sunlight, radiation and extreme temperatures.
 - The blackhead remover is not waterproof. Do not use the device while showering or bathing.
 - When unpacking do not use pointed or sharp-edged objects.
 - The surface of the blackhead remover should not be exposed to any pressure, otherwise damage can occur.
 - Improper cleaning of the device can result in damage. Avoid using aggressive cleaning agents, cleaning equipment with metal or nylon bristles, and sharp-edged or metallic cleaning instruments.

- 2 CONTENT**
- After unpacking, make sure that the following parts have been included:
- Blackhead Remover
 - USB charging cable (USB-A to USB-C)
 - 5 x attachments
 - 15 x replacement filters
 - 2 x replacement locking rings
 - Instruction manual with warranty

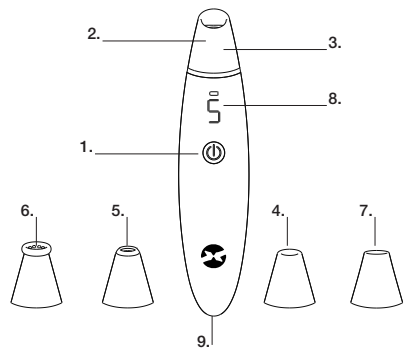- 3 DEVICE PARTS**
- 
1. On/off button and 5-level suction power
 2. Suction head
 3. Cleansing attachment with lifting effect (strong suction)
 4. Standard suction attachment (medium suction)
 5. Silicone Cleaning Attachment (low Suction)
 6. Silicone massage attachment (low absorbency)
 7. Oval beauty attachment (low absorbency)
 8. Display of the battery charge level and the selected suction power
 9. Connector for USB charging cable

- 4 INSTALLATION**
- 4.1 Unpacking**
-  **WARNING!**
RISK OF DAMAGE!
When unpacking the device, do not use pointed or sharp-edged objects.
1. Carefully unpack the device. Please note the information for the disposal of packaging materials in Chapter 10 – DISPOSAL.
 2. The device may be protected for transport with transport locks.
 3. Remove them completely. Do not use aggressive cleaning agents to remove leftovers of the transport locks.

4. Before using the blackhead remover, check whether the device has any damage.
5. Check the scope of delivery, see Chapter 2 – CONTENT.

- 4.2 Cleaning**
-  **WARNING!**
Before each appliance cleaning, the blackhead remover must be switched off. **RISK OF ELECTRIC SHOCK!**

Never immerse the device or USB cable in water or other liquids.

1. Clean the outer surface of the blackhead remover and the attachments with warm water and standard household washing-up liquid.
2. Dry the cleaned parts with a soft cloth.

- 5 GETTING STARTED**
- 5.1 Charging the Battery**
-  **DANGER!**
When charging the battery of the blackhead remover, please note:
- The blackhead remover must not be charged in the bathroom or in damp rooms.
 - If the blackhead remover has become wet, let it dry well before connecting the USB charging cable to the mains.
 - Do not place vessels filled with liquids, such as flower vases, on or in the immediate vicinity of the item. The vessel can tip over and the liquid can compromise electrical safety. There is a risk of electric shock.
 - Use only suitable AC adapters (not included in content) for charging: AC adapter of protection class approved for use with household appliances with an output voltage of 5V DC and an output current of max. 1A.
 - During charging, the AC adapter (not included in content) becomes noticeably warm. That’s normal.
 - Do not use defective chargers and do not repair these.
 - Do not connect the blackhead remover to the power supply when the device itself or the USB charging cable has visible damage.

Before using the device for the first time, fully charge the battery from the mains using a mains adapter (not included in content). The device cannot be used while charging.

1. Plug one end of the USB charging cable into the connector socket on the blackhead remover.
2. Connect the other end of the USB charging cable with a suitable AC adapter (not included in content) to a power outlet. During the charging process, the charging indicator light will turn red. A normal charging process takes about 2 hours with an empty battery. Once the battery is fully charged, the charge indicator light will turn green.
3. After charging, unplug the AC adapter (not included in content) from the power outlet and unplug the USB charging cable from the blackhead remover. With a fully charged battery, you can use the blackhead remover for about 90 minutes. If the display of the blackhead remover shows a low battery level, the battery must be fully recharged.

5.2 Mounting the Desired Attachment onto the Suction Head

1. The filter and locking ring are already pre-mounted in the device.
2. There are 5 different attachments to choose from:
 - Cleansing attachment with lifting effect (strong suction)
For removing blackheads, grease, dust, make-up residue, etc. Application: Depending on the condition of the skin, use once a week for about 5 minutes. Do not use around the eyes. The attachment can also be used on parts of the body such as the elbows.
Be careful not to hold the attachment in one place for too long, as the strong suction force can cause bruising or skin irritation.
 - Standard suction attachment (medium suction)
For removing blackheads.
Application: Depending on the skin condition, use once a week for about 5 minutes.
This attachment is slightly gentler than the large attachment and is well suited for normal facial cleansing with slightly to moderately clogged pores. Again, be careful not to hold the device in one place for too long to avoid skin irritation or bruising.
 - Silicone Cleaning Attachment (low Suction)
For removing dust, grease and makeup residue.
This attachment is very gentle and is particularly suitable for more sensitive skin or for regular, gentle cleansing.
 - Silicone massage attachment (low absorbency)
For a gentle facial massage and to support the absorption of care products.
 - Oval beauty attachment (low absorbency)
For daily skin care and gentle facial treatment, especially for

- other hand.
6. Never leave the device in the same area for more than 2 seconds to avoid skin irritation or bruising.
7. To turn off the blackhead remover, long press the power button.
8. After cleansing, we recommend using a gentle toner. Afterwards a moisturizing face mask or rinsing the face with cold water is recommended to soothe the skin.
9. If the skin is red after application, this is usually normal. The redness usually subsides within 1-2 days. Avoid saunas, solariums and sun during this time.
10. Depending on the skin type, the device should be used no more than 1-2 times a week.

6 STORAGE



DANGER!

RISK OF BURNS AND/OR DAMAGE!

If you do not use the device for a longer period of time, we recommend that you store it in a safe place.

- If the blackhead remover is used improperly or stored incorrectly, harmful liquids (acids) can leak out of the battery. Avoid any contact with a leaking battery and the corresponding escaping substances, as these can cause burns, chemical burns and skin intolerances.
- Never allow leaking battery fluids to come into contact with eyes, mucous membranes or skin.
- If you still come into contact with the liquid, wash the affected area with water and consult a doctor if necessary.

1. The blackhead remover and attachments should be cleaned before every use - see Chapter 7 CLEANING AND CARE.
2. Keep the device in a safe place where children and animals do not have access to.

7 CLEANING AND CARE



WARNING!

RISK OF BURNS!

The device may get very hot during use. Before each cleaning, the device should be completely cooled down.



WARNING!

Before each cleaning, the appliance must be switched off.

DANGER OF SHORT CIRCUIT!

- Never immerse the device or USB cable in water or other liquids, do not clean it under running water.
- Make sure that no liquids get into the case during cleaning.
- Make sure that no moisture enters the USB connection socket.

Poor cleanliness of the device can destroy the surface of the device, which affects the service life and potentially leads to dangerous situations. Therefore, clean the blackhead remover regularly.

Do not use aggressive abrasive cleaners or pointed or sharp-edged instruments to clean the appliance, as they can scratch and destroy the surfaces.

1. Turn off the blackhead remover before each cleaning.
2. Before cleaning, the device must be completely cooled down.
3. Clean the blackhead remover and its attachments with warm water and standard household washing-up liquid. Dry the cleaned parts with a soft cloth.
4. Cleaning the attachments / filters / locking rings: Take off the used attachment and remove the used filter and the sealing rings on the suction head. Filters and locking rings can be used several times. Wash the attachment and filter as well as the locking rings in lukewarm water after use and allow them to dry before using them again. If the filter is still dirty or defective, use a new filter. If the locking rings tear during cleaning, use the replacement locking rings supplied.

Filter Replacement

1. Use tweezers to pull the dirty filter out of the suction channel of the suction head.
2. Place a new filter in the suction head. The filter must be properly inserted into the suction duct for the device to function correctly.
3. Make sure that the silicone locking ring on the suction head is correctly attached.
4. Attach the desired attachment to the suction head.

8 TROUBLESHOOTING



DANGER!

- Never try to repair the device yourself. If your device is not working properly, contact the retailer where you purchased the device.
- Never operate a defective device.
- Never operate a device that has been dropped.

If malfunctions occur during operation, please check the following table to see if you can fix the problem yourself. All other repairs are not permitted and the warranty claim expires.

Problem	Possible Cause	Action
Device can not be turned on.	Battery is not charged.	Charge the battery. See Chapter 5.1 – CHARGE BATTERY
Attachment can not be properly attached to suction head.	No locking ring on the suction head.	Use the provided replacement locking rings and place it correctly on the suction head.

10 DISPOSAL

- When unpacking, make sure that the components of the packaging (polyethylene bags, polystyrene pieces) do not come within the reach of children. **DANGER OF SUFFOCATION!**
- Old appliances that are no longer in use must be sent to the responsible recycling centre. Under no circumstances should they be exposed to open flames.
- Old appliances are not unusable waste. Environmentally friendly disposal recovers many valuable raw materials.
- When electrical equipment is disposed of in landfills, substances that are hazardous to health can enter the groundwater. Thus, such substances enter the food chain and harm your health and well-being.
- Before you dispose of any old device, be sure to make it inoperable first! This means always removing the batteries and disposing of them separately.
- The materials used in the device are recyclable and are provided with appropriate information. By disposing of your old device or its materials as well as the packaging properly, you make a significant contribution to protecting our environment.
- Dispose of the packaging material in the appropriate disposal containers in accordance with the local regulations of your place of residence.
- If there are no suitable disposal containers in your living area, take these materials to a suitable municipal collection point.
- For more information, please contact your specialist dealer or your local municipal waste disposal facility.



Disposal of packaging

Please sort the packaging for recycling. Put cardboard and paperboard in the waste paper bin and plastic film in the recycling bin.



Correct disposal of used electrical and electronic equipment (Electronic waste):

The symbol of the crossed-out waste bin indicates the need for separate disposal of electrical and electronic devices. According to European regulations, used electrical and electronic equipment may no longer be treated as normal household waste, but must be handed in at a designated collection point for the recycling of such equipment. Local waste management companies have set up collection points for this purpose, where private households can hand in their old appliances free of charge. Please contact your local authority or the municipal waste disposal companies to find out about the

regional possibilities of returning these items.



Batteries and rechargeable batteries must not be disposed of in household waste!

Batteries and rechargeable batteries must not be disposed of in household waste. As a consumer, you are legally obliged to dispose of used batteries and rechargeable batteries properly, regardless of whether they contain harmful substances or not. As far as possible, please remove all batteries and rechargeable batteries before disposal of the device and return them to the designated collection points or in stores so that they can be disposed of in an environmentally friendly manner. Used batteries and rechargeable batteries can be returned free of charge at a collection point in your municipality/district or in stores so that they can be disposed of in an environmentally friendly manner and valuable raw materials can be recovered.

If disposed of improperly, toxic ingredients can be released into the environment, which have harmful effects on humans, animals and plants. Return used batteries and rechargeable batteries only when discharged. Use when possible rechargeable batteries instead of disposable batteries. Batteries with high contaminant content are also marked with the following signs:
Cd = cadmium, Hg = mercury, Pb = lead



DANGER!

ENVIRONMENTAL AND HEALTH DAMAGE!

Used batteries may contain pollutants or heavy metals that can be harmful to the environment and health. Substances that are hazardous to health can get into the groundwater. Thus, such substances enter the food chain and harm your health and well-being. In addition, batteries contain valuable raw materials that can be reused through environmentally friendly disposal.



EXPLOSION HAZARD!

- Batteries and rechargeable batteries containing lithium (Li = lithium) must be properly disposed of. **FIRE HAZARD!**
- Improper disposal can lead to short circuits, due to heat or damage. There is **FIRE AND EXPLOSION HAZARD!**
- To avoid possible short circuits, you should tape the terminals of lithium-containing batteries and rechargeable batteries.
- Before disposal, batteries and rechargeable batteries must be removed from the device and should be disposed of separately. Before disposal, make sure that batteries and rechargeable batteries are in a discharged state.

11 MANUFACTURER'S WARRANTY

- We offer a 2-year warranty on your device and the standard commercial warranty from the date of issue of the invoice or buying receipt.
- Within this warranty period, upon presentation of the proof of purchase or the buying receipt, all manufacturing and/or material defects that occur will be settled free of charge by repair and/or replacement of the defective parts or (at our discretion) by exchange for an equivalent, flawless article.
- The manufacturer is not liable for personal injury or property damage caused by improper use or maintenance.
- Easily breakable parts such as glass, plastic or lamps are excluded from the warranty.
- The warranty is void if the device has been opened and/or modifications made to the device by you or a third party not authorized by us.
- In the event of improper use, the safety and functionality of the device can no longer be guaranteed and any warranty claim expires.
- Any use other than as described in this operating manual is not permitted and will result in loss of warranty and exclusion of liability.
- Printing errors and changes to the device, the operating instructions or the packaging are reserved.

If you would like to make a complaint, we generally recommend that you first contact the dealer from whom you purchased the device.

If a repair is necessary, you can reach our hotline at the following Service number: +49 (0)6831 505 98 97.

Technical Service

Jaxmotech GmbH
Ostring 60
66740 Saarlouis
Germany
E-mail: service@jaxmotech.de

Jaxmotech GmbH
Ostring 60
66740 Saarlouis
Germany
Service Hotline: +49 (0)6831 5059897
service@jaxmotech.de
www.jaxmotech.de

areas with fine wrinkles, such as the eye and mouth area.
Application:

- Place the attachment briefly on the skin and then lift it off immediately.
- Repeat this process several times without holding the attachment in one place for a long time.
- You can work from the bottom up to support a gentle tightening effect.

Suitable for:

- Cheeks
- Eye area (carefully and not directly on the eyelid)
- Nostrils
- Mouth area (not directly on the lips)

Note: This attachment is intended for a gentle massage and care, not for the removal of blackheads. Since the skin around the eyes is very sensitive, only low suction and very short movements should be used to avoid skin irritation or bruising.

5.3 Operation

1. Soften the facial pores by moistening the face with lukewarm water and then drying.
2. The blackhead remover should only be used on clean, make-up free and dry facial skin. Do not use facial scrubs before use.
3. Turn on the device with the attachment attached by pressing the on/off button for a long time.
4. Set the desired suction strength:
 - Press the on/off button once: Suction level 1 (beginner, for sensitive and dry skin)
 - Press twice: Suction level 2 (for sensitive and dry skin)
 - Press three times: Suction level 3 (for normal skin)
 - Press four times: Suction level 4 (for robust or oily skin and for stubborn blackheads - use with caution as the high suction power can quickly lead to skin irritation or bruising)
 - Press five times: Suction level 5 (for robust or very oily skin and for very stubborn blackheads - use with caution as the high suction power can quickly lead to skin irritation or bruising)

For the first application, start with the lowest suction setting. If necessary, you can gradually increase the suction power.

5. Place the device on the area of skin to be treated and move it slowly and evenly over the skin to remove blackheads and impurities. Do not apply pressure to the device.
To ensure that the attachment closes to the skin and does not draw air from the outside, make sure that the skin is tight. If necessary, pull the treated area of skin slightly with one hand to tighten the skin while moving the device over the skin with the

Subject to technical changes!