


NÁVOD K POUŽITÍ



FNM 2606

LED maska na obličej a krk

7 barev LED světla

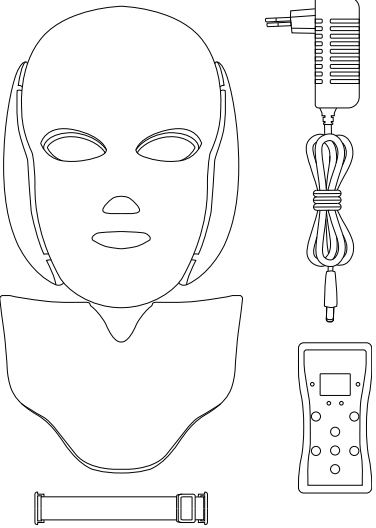

Před použitím přístroje si pečlivě přečtete tento návod, aby bylo zajištěno jeho správné a bezpečné používání.



Před prvním použitím přístroje si pečlivě přečtete celý návod k použití, zejména bezpečnostní pokyny. Tento návod uschovejte na bezpečném místě pro budoucí použití.

Pokud přístroj předáte jiné osobě, předejte jí také tento návod k použití. Tento návod k použití je k dispozici také v elektronické podobě ke stažení na adrese: www.jaxmotech.de/downloads

Případně nás kontaktujte. Rádi vám zašleme návod k použití v elektronické podobě ve formátu PDF. E-Mail: service@jaxmotech.de Telefon: +49 (0)6831 505 9800

ES prohlášení o shodě

Výrobek popsáný v tomto návodu k použití splňuje všechny příslušné harmonizované požadavky Evropské unie. Úplné znění EU prohlášení o shodě je k dispozici na internetové adrese: www.jaxmotech.de/downloads.

Obrázky uvedené v tomto návodu k použití se mohou v některých detailech lišit od skutečného provedení vašeho přístroje. Přesto se řiďte uvedenými pokyny. Výrobce si vyhrazuje právo provádět změny, které nemají vliv na funkčnost přístroje. Vámi zakoupený přístroj mohl být mezitím dále vylepšen, a proto se může v některých detailech lišit od tohoto návodu. Funkce i provozní vlastnosti však zůstávají stejné, takže můžete tento návod k použití používat v plném rozsahu.

Technické změny a tiskové chyby jsou vyhrazeny.

 Výrobky označené symbolem „CE“ splňují všechny příslušné předpisy Evropského hospodářského prostoru (EHP).

1 BEZPEČNOSTNÍ POKYNY

Před uvedením přístroje do provozu si pečlivě přečtete bezpečnostní pokyny. Informace v nich obsažené slouží k ochraně vašeho zdraví i přístroje. Nedodržení bezpečnostních pokynů může vést k vážnému poškození zdraví a k poškození přístroje.

Použití v souladu s určením
LED maska na obličej a krk – Model FNM 2606 značky SEG je určena jako přístroj pro kosmetickou péči o pleť a osobní pohodu. Přístroj je určen výhradně pro soukromé použití a není určen ke komerčnímu využití. Tento přístroj je určen k použití v domácnosti a v podobných prostředích, jako například:

- obchodech, kancelářích a jiných pracovních prostorech,
- v zemědělských podnicích,
- hosty v hotelech, motelech a dalších ubytovacích zařízeních,
- v penzionech se snídaní.

Přístroj je určen výhradně k používání ve vnitřních prostorech. Zařízení používejte výhradně v souladu s jeho určeným účelem. V případě nesprávného používání již nelze zaručit bezpečnost a funkčnost zařízení a veškeré záruční nároky zanikají.

Vysvětlení použitých symbolů

NEBEZPEČÍ!

Označuje nebezpečnou situaci, která může při nedodržení pokynů vést k bezprostřednímu ohrožení života a zdraví.

VAROVÁNÍ!

Označuje nebezpečnou situaci, která může při nedodržení pokynů vést k možnému ohrožení života a zdraví.

UPOZORNĚNÍ!

Označuje nebezpečnou situaci, která může při nedodržení pokynů vést ke středně těžkým nebo lehkým zraněním.

POZNÁMKA!

Označuje situaci, která může při nedodržení pokynů vést k poškození přístroje.

VAROVÁNÍ!

NEBEZPEČÍ VÝBUCHU!

Nesprávná elektrická instalace nebo příliš vysoké síťové napětí mohou vést k úrazu elektrickým proudem.

VAROVÁNÍ!

Nedovoďte, aby zařízení používal kdokoli, kdo není seznámen s návodem k použití. Toto zařízení mohou používat děti od 8 let a osoby se sníženými fyzickými, smyslovými nebo mentálními schopnostmi nebo osoby s nedostatkem zkušeností a znalostí pouze tehdy, pokud jsou pod dohledem nebo byly poučeny o bezpečném používání zařízení a porozumí z toho vyplývající a související nebezpečí. Děti si s tímto zařízením nesmějí hrát.

Čištění a uživatelskou údržbu nesmějí provádět děti, pokud nejsou starší 8 let a nejsou pod dohledem.

Zařízení uchovávejte mimo dosah dětí mladších 8 let. Přístroj není hračka. **NEBEZPEČÍ PORANĚNÍ!**

NEBEZPEČÍ!

- Přístroj nikdy nepřipojujete k elektrické síti, pokud přístroj, síťový kabel nebo síťová zástrčka vykazují patrné poškození.
- V případě poškození přístroje, krytu nebo ochranných částí odpojte přístroj od elektrické sítě.
- V případě nebezpečí nebo závady okamžitě vytáhněte síťovou zástrčku ze zásuvky.
- Nikdy se nepokoušejte přístroj opravovat sami. Pokud přístroj nefunguje správně, obraťte se na prodejce, u kterého jste přístroj zakoupili.
- Nikdy neotevírejte kryt přístroje.
- Pokud je síťový kabel poškozen, musí být z bezpečnostních důvodů opraven výrobcem nebo vyměněn jeho zákaznickým servisem nebo obdobně kvalifikovanou osobou.

- Nikdy nepoužívejte vadný přístroj.
- Nikdy nepoužívejte přístroj, který spadl na zem.
- Určeno pouze k vnějšímu použití.
- Nedívejte se přímo do LED diod. Nedívejte se do přímého světla masky. Během aplikace mějte zavřené oči. Pokud je světlo stále velmi intenzivní, zakryjte si oči bavlněným hadříkem.
- Osoby citlivé na světlo, osoby trpící epilepsií nebo užívající léky, které zvyšují citlivost na světlo, těhotné ženy, osoby s citlivou pokožkou, se sklonem k alergiím na teplo nebo s kožními onemocněními, poraněními či jizvami by měly přístroj používat pouze po konzultaci s lékařem.

VAROVÁNÍ!

Přístroj nenahrazuje lékařskou ani terapeutickou léčbu.

NEBEZPEČÍ!

- Pokud je některá část přístroje poškozena, vyhněte se otevřenému ohni a dalším zdrojům napomáhajícím ke vznícení. Neprodleně kontaktujte zákaznický servis.
- Při vybalování dbejte na to, aby se části obalu (polyetylenové sáčky, polystyrenové části) byly mimo dosah dětí.
- NEBEZPEČÍ UDUŠENÍ!**
- Nepřipojujete přístroj k elektrické síti, dokud zcela neodstraníte všechny obalové materiály a přepravní zajištění.
- Přístroj používejte pouze při napětí 220–240 V~/50–60 Hz.
- Varování:** Používejte pouze odpojitelný adaptér **WY-1810**, který byl dodán s tímto výrobkem.
- K připojení přístroje k elektrické síti nepoužívejte prodávací kabely, rozbojky ani vícenásobné zásuvky.
- Přístroj připojujete pouze do řádně uzemněné zásuvky v souladu se síťovou zástrčkou, která je určena výhradně pro daný přístroj. Zásuvka musí být jištěna pojistkou o hodnotě alespoň 10 A. Nedodržení těchto pokynů může vést k nebezpečným situacím nebo k poškození přístroje.

- Po instalaci přístroje musí být síťová zástrčka i bezpečnostní zásuvka vždy snadno přístupná.
- Technické parametry vaší elektrické sítě musí odpovídat hodnotám uvedených na výrobním štítku přístroje.
 - Elektrický okruh ve vaší domácnosti musí být vybaven jističem umožňující nouzové odpojení přístroje.
 - Na přístroji neprovádějte žádné úpravy.
- NEBEZPEČÍ ÚRAZU ELEKTRICKÝM PROUDEM!**
- Chcete-li přístroj zcela odpojit od elektrické sítě, vytáhněte síťový kabel ze zásuvky. Nikdy netahejte za kabel, ale vždy uchopte síťovou zástrčku.
- Nepřenášejte přístroj za napájecí kabel.
- I když je přístroj vypnutý, uvnitř přístroje je pod napětím, dokud je síťová zástrčka zapojená do zásuvky.
- Přístroj je odpojen od elektrické sítě pouze tehdy, když je síťová zástrčka vytažena ze zásuvky.
- Bouřky mohou poškodit elektrické spotřebiče. Doporučujeme během bouřky odpojit přístroj od elektrické sítě.

- Před každou údržbou či čištěním odpojte přístroj od elektrické sítě.
- Nikdy nevkládejte přístroj do vody ani jiných kapalin a ani ho nečistěte pod tekoucí vodou.
- LED masku na obličej a dekolť nelze mýt v myčce nádobí.
- Nikdy se nedotýkejte síťové zástrčky mokřýma rukama.
- Nepoužívejte přístroj ve venkovním prostředí.
- Neumísťujte přístroj na místo, kde by mohl přijít do styku s vodou nebo deštěm, aby nedošlo k poškození elektrické izolace. Pokud do přístroje vnikne kapalina, okamžitě jej odpojte od elektrické sítě.
- Pokud nebudete přístroj delší dobu používat, doporučujeme jej odpojit od elektrické sítě.
- Dbejte na to, aby se přístroj ani síťový kabel nedostaly do styku se zdroji tepla (např. varnými deskami nebo plameny plynových hořáků).
- Nepoužívejte přístroj v blízkosti výbušných nebo hořlavých výparů.

- Nevystavujte přístroj extrémním podmínkám, jako jsou:
 - vysoká vlhkost nebo mokro,
 - extrémní teploty,
 - přímé sluneční záření,
 - otevřený oheň.

UPOZORNĚNÍ!

- Při vybalování si zapamatujte umístění všech částí přístroje pro případ, že jej budete muset znovu zabalit a přepravovat.
- Nepoužívejte přístroj, dokud nejsou všechny jeho součásti správně namontovány na určených místech.
- Nenechávejte napájecí kabel volně viset. **NEBEZPEČÍ ZAKOPNUTÍ!**

POZNÁMKA!

NEBEZPEČÍ POŽÁRU!


- Neumísťujte přístroj na horký povrch ani do blízkosti silných zdrojů tepla.
- Na LED masku na obličej a krk nepokládejte žádné předměty.
- Nezakrývejte přístroj ani jeho větrací otvory.
- Nezakrývejte ani neucpávejte otvory na přístroji.
- Pro správný odvod tepla a bezpečný provoz je nutné zajistit dostatečné větrání kolem přístroje. Z tohoto důvodu musí být ze všech stran zachována minimální bezpečnostní vzdálenost 10 cm.
- Přístroj není určen k provozu s externím časovačem ani se samostatným systémem dálkového ovládání.
- Přístroj obsahuje elektrické obvody a LED diody. Výrobek nestlačujte ani neohýbejte.

2 OBSAH BALENÍ

Po vybalení zkontrolujte, zda balení obsahuje všechny následující součásti:

- LED maska na obličej s upínacím popruhem na hlavu a USB kabelem
- Nástavec na krk s USB kabelem
- Dálkový ovladač
- Napájecí kabel s adaptérem
- Návod k použití a záruční list

3 ČÁSTI PŘÍSTROJE

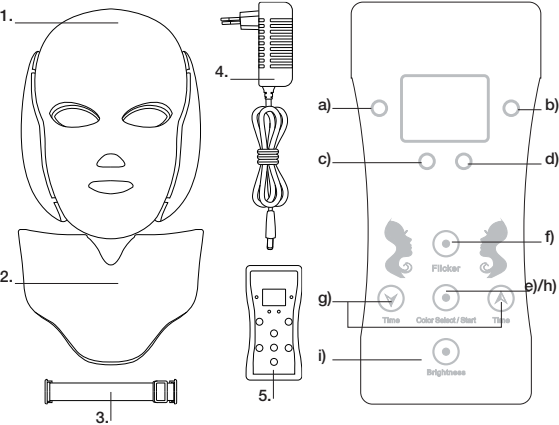

- Maska na obličej
- Maska na dekolť
- Hlavový pásek
- Síťový kabel
- Dálkový ovladač
- Kontrolka provozu
- Indikace zapnuté funkce
- Indikace zapnutého světelného režimu
- Indikace zapnutého automatického programu
- Tlačítko Zap./Vyp.
- Tlačítko blikání
- Tlačítko časovače
- Tlačítko výběru barvy světla
- Tlačítko nastavení jasu

4 INSTALACE

4.1 Vybalení

VAROVÁNÍ!

NEBEZPEČÍ POŠKOZENÍ!

Při vybalování přístroje nepoužívejte špičaté ani ostré předměty.

- Přístroj opatrně vybalte. Věnujte prosím pozornost informacím o likvidaci obalových materiálů v kapitole 10 – LIKVIDACE.
- Přístroj může být během přepravy zajištěn přepravními pojistkami. Ty zcela odstraňte. K odstranění případných zbytků nepoužívejte agresivní čisticí prostředky.
- Před použitím LED masky na obličej a dekolť do provozu zkontrolujte, zda není přístroj poškozen.
- Zkontrolujte, zda je obsah balení kompletní, viz kapitola 2 – OBSAH BALENÍ.

4.2 Čištění

VAROVÁNÍ!

Před každým čištěním přístroje musí být LED maska na obličej a krk vypnutá. **NEBEZPEČÍ ÚRAZU ELEKTRICKÝM PROUDEM!** Nikdy neponořujte přístroj ani napájecí kabel do vody nebo jiných kapalin.

- LED masku na obličej a krk čistěte teplou vodou a běžným prostředkem na mytí nádobí.
- Poté očištěné části osušte měkkým hadříkem.

5 POUŽITÍ

POZNÁMKA!

- Nepoužívejte déle než 15–20 minut denně.
- Nepoužívejte přístroj po delší dobu.
- Pro intenzivnější účinek používejte svou běžnou péči o pleť.
- Používáte-li LED masku na obličej a krk společně s kosmetickou pleťovou maskou nebo přípravkem pro péči o pleť, doporučujeme zvolit červené LED světlo. Po použití LED masku očistěte a osušte vlhkým, měkkým hadříkem.
- Pro dosažení nejlepších výsledků používejte LED masku na obličej a dekolt 2–3× týdně. Trvalého účinku dosáhnete pouze při pravidelném a důsledném používání.
- Při dlouhodobém pravidelném používání doporučujeme LED masku na obličej a dekolt používat maximálně 2 měsíce, poté její používání na 2 měsíce přerušit.

Při pravidelném používání může přispět k:

- zlepšení kvality a pružnosti pokožky,
- redukci vrásek,
- podpoře krevního oběhu,
- zlepšení prokrvení pokožky obličeje.

- Obličej a krk jemně očistěte a osušte. Netřete si pleť na obličejí, aby nedošlo k její podráždění.
- Pro zesílení účinku LED masky na obličej a dekolt můžete na obličej a krk nanést kosmetický přípravek (např. pleťový krém, pleťovou masku nebo jiný přípravek pro péči o pleť).
- Před nasazením masky vyzkoušejte funkce dálkového ovládání. k jinému zařízení než k přiloženému dálkovému ovládání v balení.
- Připojte USB kabely masky na obličej a masky na dekolt k dálkovému ovládání.**UPOZORNĚNÍ!** USB kabely masky na obličej ani masky na dekolt

- NEPŘIPOJUJTE k jinému zařízení než k přiloženému dálkovému ovládání v balení.
- V případě potřeby spojte masku na obličej s maskou na dekolt zasunutím zasunutím klapky masky na dekolt do drážky masky na obličej.
 - Připojte napájecí kabel k dálkovému ovládání a poté k elektrické sítě.
 - Nasadte si masku na obličej a podle potřeby použijte nástavec na dekolt. Pro pohodlné a bezpečné upevnění utáhněte přiložený popruh na hlavu.
 - Během používání nečtěte knihy, nesledujte televizi ani obrazovku počítače. Mějte zavřené oči. Pro co nejpříjemnější relaxační zážitek doporučujeme používat LED masku na obličej a dekolt pohodlně vsedě nebo vleže.
 - Zapněte LED masku na obličej a dekolt pomocí dálkového ovládání (Start).**UPOZORNĚNÍ!** Zařízení nezapínejte, dokud nemáte masku správně nasazenou na obličejí.
 - Dálkové ovládání můžete dále nastavit:
 - Výběr barvy světla (C1–C8): červená (C1), zelená (C2), modrá (C3), žlutá (C4), fialová (C5), tyrkysová (C6), bílá (C7) nebo automatický program (C8).
 - Nastavení času (Time+ / Time–): maximální doba nastavení je 90 minut. Doporučujeme dobu použití v délce 15–20 minut. Po uplynutí nastaveného času se přístroj automaticky přepne do pohotovostního režimu. Pokud nepoužíváte tlačítko pro nastavení času, automaticky nastavený čas udrží zařízení v provozu po dobu 30 minut.Nastavení jasu (Brightness A1–A9): slouží k nastavení intenzity světla. Při prvním použití nastavte nejnižší intenzitu a při dalších použitích ji postupně zvyšujte.
 - Tlačítko blikání „Flicker“: aktivuje blikání masky pro intenzivnější světelný účinek.
 - F1 – zapnuto
 - F2 – rychlé blikání
 - F3 – středně rychlé blikání
 - F4 – pomalé blikání

Dlouhodobé používání této funkce se nedoporučuje (maximálně jednou týdně).

Osm světelných režimů

Režim	Barva	Účinek
C1	Červená	Vyhlazuje jemné vrásky a zlepšuje pevnost pokožky.
C2	Zelená	Vyrovňuje hydrataci pokožky a pomáhá regulovat nadměrnou tvorbu kožního mazu.
C3	Modrá	Čistí pokožku a pomáhá zmírňovat nedokonalosti pleti.
C4	Žlutá	Sjednocuje tón pleti a zklidňuje zarudnutí.
C5	Fialová	Vyhlazuje nedokonalosti a zlepšuje strukturu pokožky.
C6	Tyrkysová	Dodává pokožce energii a podporuje její svěží vzhled.
C7	Bílá	Podporuje vypnutí hlubších vrstev pokožky a rozjasňuje mdlou pleť.
C8	Automatický cyklus	Poskytuje komplexní péči pro zdravou a zářivou pleť v jednom programu.

6 VYŘAZENÍ Z PROVOZU

NEBEZPEČÍ!

Pokud nebudete přístroj delší dobu používat, doporučujeme jej uložit na bezpečném místě.

- Před uskladněním LED masku na obličej a krk očistěte, viz kapitola 7 – ČIŠTĚNÍ A PÉČE.
- Přístroj uchovávejte na bezpečném místě mimo dosah dětí a zvířat.

7 ČIŠTĚNÍ A PÉČE

VAROVÁNÍ!

Před každým čištěním musí být přístroj vypnutý.

NEBEZPEČÍ ZKRATU!

- Nikdy neponořujte přístroj ani napájecí kabel do vody nebo jiných kapalin a nečistěte je pod tekoucí vodou.
- Dbejte na to, aby se při čištění nedostala žádná kapalina do pouzdra přístroje.
- Zabraňte vniknutí vlhkosti do připojovací zdiřky.

Nedostatečné čištění přístroje může poškodit jeho povrch, což má vliv na délku jeho životnosti a vést k nebezpečným situacím. LED masku na obličej a dekolt proto pravidelně čistěte.

K čištění přístroje nepoužívejte agresivní ani drsné čisticí prostředky, ani špičaté nebo ostré předměty, protože mohou poškrábat a poškodit jeho povrch.

- Před každým čištěním LED masku na obličej a dekolt vypněte.
- Před čištěním nechte přístroj zcela vychladnout.
- LED masku na obličej a dekolt čistěte teplou vodou a běžným prostředkem na mytí nádobí.
- Poté vyčištěné části osušte měkkým hadříkem.

POZNÁMKA!

Výměna LED diod není možná.

8 ODSTRAŇOVÁNÍ ZÁVAD

NEBEZPEČÍ!

- Nikdy se nepokoušejte přístroj opravovat sami. Pokud přístroj nefunguje správně, obraťte se na prodejce, u kterého jste jej zakoupili.
- Nikdy nepoužívejte poškozený přístroj.
- Nikdy nepoužívejte přístroj, který spadl na zem.

Pokud během provozu dojde k poruše, zkontrolujte podle následující tabulky, zda můžete problém odstranit sami. Jakékoli jiné opravy jsou nepřipustné a vedou k zániku nároku na záruku.

Problém	Možná příčina	Řešení
Přístroj nelze zapnout.	Přístroj není správně připojen.	Zkontrolujte, zda je napájecí kabel správně připojen k LED masce.

9 TECHNICKÉ ÚDAJE

Typ přístroje:	Kosmetická LED maska na obličej a krk
Model:	FNM 2606
Materiál:	ABS
Počet LED diod:	192 138 LED diod pro masku na obličej + 54 LED diod pro masku na krk
Příkon:	9,5W
Vstupní napětí:	18 V DC
Vstupní proud:	1 A DC
Rozměry výrobku:	21 x 13 x 35 cm
Čistá hmotnost:	0.63 kg
Délka kabelu adaptéru:	140 cm

Technické změny vyhrazeny!

Technické údaje adaptéru

Výrobce:	Guangzhou Hongxin Beauty Salon Equipment Co., Ltd.
	401, Building 2, Xinsheng Science Park, No. 166 Yingbin Avenue West, HuaduDistrict, Guangzhou (Location: Room 402, Building 2)
Dovozce:	Jaxmotech GmbH Ostring 60, 66740 Saarlouis, Germany
Model:	1820
Vstupní napětí:	AC 100-240V
Vstupní frekvence:	50/60Hz
Výstupní napětí:	18 V DC
Výstupní proud:	1 A DC
Výstupní výkon:	18 W
Průměrná účinnost v aktivním režimu:	85.36%
Účinnost při nízkém zatížení (10 %):	83.22%
Spotřeba energie bez zátěže:	0.075 W

Technické změny vyhrazeny!

10 LIKVIDACE

- Při vybalování dbejte na to, aby se části obalu (polyetylenové sáčky, polystyrenové díly) nedostaly do blízkosti dosahu dětí. **NEBEZPEČÍ UDUŠENÍ!**
- Staré přístroje, které již nejsou používány, odevzdejte na příslušném sběrném místě k recyklaci. Nikdy je nevystavujte otevřenému ohni.
- Vysloužilé přístroje nejsou běžným odpadem. Jejich ekologickou likvidací lze získat zpět mnoho cenných surovin.
- Při likvidaci elektrických zařízení na skládkách mohou nebezpečné látky pronikat do podzemních vod. Tyto látky se následně mohou dostat do potravního řetězce a negativně ovlivnit vaše zdraví i životní prostředí.
- Před likvidací přístroj vždy znefunkčňte. To znamená, že je nutné vyjmout baterie a zlikvidovat je odděleně.
- Materiály použité při výrobě přístroje jsou recyklovatelné a jsou příslušně označeny. Správnou likvidací přístroje, jeho materiálů i obalu významně přispíváte k ochraně životního prostředí.
- Obalový materiál zlikvidujte v souladu s místními předpisy a uložte jej do určených sběrných nádob.
- Pokud ve vašem okolí nejsou k dispozici vhodné sběrné kontejnery, odevzdejte tyto materiály na příslušném obecním sběrném místě.
- Podrobnější informace získáte u svého prodejce nebo u příslušných místních orgánů zajišťujících nakládání s odpady.



Likvidace obalu

Obal zlikvidujte podle jednotlivých druhů materiálu. Karton a lepenku odevzdejte do sběru papíru, fólie do sběru pro recyklaci (tříděného odpadu).



Správná likvidace použitých elektrických a elektronických zařízení (elektroodpadu):

Symbol přeškrtnuté popelnice označuje, že elektrická a elektronická zařízení musí být likvidována odděleně od běžného komunálního odpadu. V souladu s evropskými předpisy nesmí být použita elektrická a elektronická zařízení vyhazována do komunálního odpadu, ale musí být odevzdána na určeném sběrném místě k recyklaci. Obecní společnosti zajišťující nakládání s odpady zřizují sběrná místa, kde mohou domácnosti bezplatně odevzdat svá vysloužilá zařízení. Informace o možnostech odevzdání ve vašem regionu získáte na obecním úřadě nebo u místní společnosti zajišťující odpadové hospodářství.

11 ZÁRUKA VÝROBCE

- Na tento přístroj poskytujeme zákonnou odpovědnost za vady po dobu 2 let a běžnou obchodní záruku počínaje datem vystavení faktury nebo dodacího listu.
- Během záruční doby budou po předložení dokladu o koupi nebo dodacího listu všechny výrobní a/nebo materiálové vady bezplatně odstraněny opravou nebo výměnou vadných dílů, případně (dle našeho uvážení) výměnou za rovnocenný výrobek bez vad.
- Výrobce neodpovídá za újmu na zdraví ani za věcné škody vzniklé v důsledku nesprávného používání nebo nedostatečné údržby.
- Záruka se nevztahuje na snadno rozbitné části, jako je například sklo, plastové díly nebo světelné zdroje.
- Záruka zaniká, pokud přístroj otevřete vy nebo třetí osoba, která k tomu nebyla námi oprávněna, nebo pokud na přístroji provedete jakékoli úpravy.
- Při použití v rozporu s určeným účelem nelze zaručit bezpečnost ani správnou funkci přístroje a zanikají veškeré nároky ze záruky.

- Jakékoli použití, které není popsáno v tomto návodu k použití, je nepřipustné a vede ke ztrátě práv z odpovědnosti za vady, záruky i odpovědnosti výrobce.
- Vyhrazujeme si právo na tiskové chyby a změny přístroje, návodu k použití i obalu.

Pokud chcete uplatnit reklamaci, doporučujeme vám nejprve kontaktovat prodejce, u kterého jste přístroj zakoupili.

V případě potřeby opravy se můžete obrátit na naši zákaznickou linku na následujícím telefonním čísle: +49 (0)6831 505 98 97.

Technický servis

Jaxmotech GmbH
Ostring 60
66740 Saarlouis
Germany

E-Mail: service@jaxmotech.de

Jaxmotech GmbH
Ostring 60
66740 Saarlouis
Germany
Service Hotline: +49 (0)6831 5059897
service@jaxmotech.de
www.jaxmotech.de


INSTRUCTION MANUAL

SEG

FNM 2606

LED FACE AND NECK MASK

7 LED colors

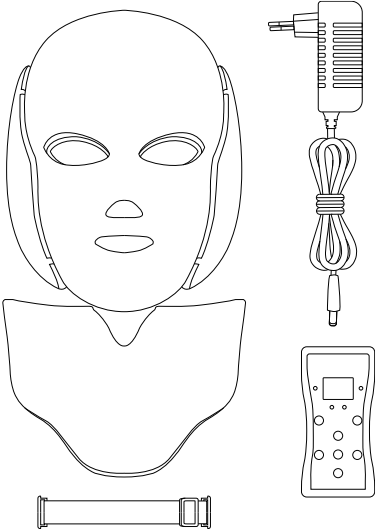

For proper and safe use of the device, please read these instructions carefully.



Please read the entire user manual, especially the safety instructions, before using the device for the first time. Keep this instruction manual in a safe place for future use. If you pass on the device, you must also hand over this operating manual.

This instruction manual is also available for download in an electronic format:
www.jaxmotech.de/downloads

Or contact us. We will be happy to send you the operating instructions as an electronic PDF file.
E-mail: service@jaxmotexch.de
Phone: +49 (0)6831 505 9800

EC – DECLARATION OF CONFORMITY

The product described in this instruction manual complies with all relevant harmonised requirements of the EU. The complete Declaration of Conformity can be found on our website: www.jaxmotech.de/downloads.

The illustrations contained in this instruction manual may differ from the actual design of your device. In such cases follow the facts described. The manufacturer reserves the right to make such changes that do not affect the functioning of the device. The device you purchased may have been changed and may therefore have differences from the operating instructions. Nevertheless, the functions and operating conditions are identical, so that you can use the operating instructions to the full extent.

Technical changes or printing errors are reserved.

 Products marked with the 'CE' symbol comply with all applicable Community regulations of the European Union economic area.

1 SAFETY INSTRUCTIONS

Please read the safety instructions carefully before using the device. The information contained herein are for the purpose to protect your health and the device. Failure to follow the safety instructions may result in serious adverse effects on your health and damage to your device.

Intended use

The LED Face and Neck Mask – SEG model FNM 2606 – is intended to be a device for cosmetic skin care and well-being. The device is exclusively for private use and not for commercial use. This appliance is intended for use at home and in similar applications, such as:

- in shops, offices and other work areas,
- in agricultural estates,
- from guests in hotels, motels and other accommodations,
- Bed & Breakfast.

The device is intended exclusively for the operation indoors. Operate the device only in the sense of its intended use. In the event of improper use, the safety and functionality of the device can no longer be guaranteed and any warranty claim expires.

Explanation of the symbols used

DANGER!

refers to a dangerous situation which, if not averted, poses an immediate threat to life and health.

WARNING!

refers to a dangerous situation which, if not averted, may pose possible imminent danger to life and health.

CAUTION!

refers to a dangerous situation which, if not averted, may result in moderate or minor injuries.

NOTE!

refers to a dangerous situation which, if not averted, results in possible damage to the device.

WARNING!

EXPLOSION HAZARD!

Faulty electrical installation or too high mains voltage can lead to electric shock.

WARNING!

Do not allow anyone who is not familiar with the user manual to use the device. This device can be used by children aged below 8 years, as well as by persons with reduced physical, sensory or mental abilities or lack of experience and knowledge, if they are supervised or have been instructed in the safe use of the device and understand the resulting dangers. Children are not allowed to play with the device. Cleaning and maintenance by the user may not be carried out by children unless they are 8 years of age or older and are supervised.

The device should be kept away from children younger than 8 years of age. The device is not a children's toy.
RISK OF INJURY!

DANGER!

- Do not connect the appliance to the power supply if the appliance, the power cord or the mains plug has visible damage.
- In case of damage of the device, the housing and covers, the device must be disconnected from the electrical circuit.
- In the event of danger or a defect, immediately pull the power plug from the socket.
- Never attempt to repair the device yourself. If the device is not working properly, contact the retailer from whom you purchased the device.
- Never open the case of the device.
- If the power cord is damaged, it must be repaired by

- the manufacturer, customer service or similarly qualified persons in order to avoid danger.
- Never operate a defective device.
- Never operate a device that has been dropped.
- Intended for external use only.
- Do not look directly into the LEDs. Don't look into the direct light of the mask. Close your eyes while applying. If the light is still too intense, cover your eyes with a cotton cloth.
- People with photosensitivity, epilepsy or photosensitivity-promoting medication, pregnant women, people with sensitive skin, people who are prone to heat allergies and people with skin diseases, injuries or scars should only use the device after consulting a doctor.

WARNING!

The device is not a substitute for medical or therapeutic treatment.

DANGER!

- If a system part is damaged, avoid open flames and ignition sources. Contact your customer service immediately.
- When unpacking, make sure that the components of the packaging (polyethylene bags, polystyrene pieces) do not come within the reach of children.
DANGER OF SUFFOCATION!
- Do not connect the device to the power supply until you have completely removed all packaging components and transport locks.
- Only operate the device at 220-240 V~/50-60 Hz AC.
- **Warning:** Only use the detachable adapter **WY-1810** that was supplied with this product.
- Do not use power strips, multiple sockets or extension cords to connect the appliance to the power supply.
- You need a safety socket that is properly grounded according to the mains plug and assigned exclusively to the device. The socket must be fused with a 10 A fuse or higher. Failure to do so may result in dangerous accidents or damage to the device.

- The mains plug and the safety socket must be easily accessible at all times after the installation of the device.
- The technical data of your electrical supply must correspond with the values indicated on the rating label.
- Your home circuit must be equipped with a circuit breaker for emergency shutdown of the device.
- Do not make any changes to the device.
RISK OF ELECTRIC SHOCK!
- To completely disconnect the appliance from the mains, the power cord must be unplugged. Never pull on the power cord when you want to unplug it from the socket, but always grab the plug.
- Do not carry the device by the power cord.
- Even when the device is switched off, there is voltage inside the device as long as the power plug is plugged into the socket.
- The appliance is only disconnected from the mains when the mains plug is unplugged.
- Thunderstorms can damage electrical appliances. We recommend that you unplug the device during thunderstorms.
- Before any maintenance and cleaning work, disconnect the device from the power supply.
- Never immerse the device in water or other liquids, do not clean it under running water.
- The LED face and neck mask must not be cleaned in the dishwasher.
- Never touch the power plug with wet hands.
- Do not operate the appliance outdoors.
- Do not place the appliance in a location where it comes into contact with water/rain so that the insulation of the electrical system is not damaged. If liquid enters the device, immediately disconnect the power plug from the electrical circuit.
- If you do not use the device for an extended period of time, we recommend that you disconnect the device from the mains.
- Make sure that the appliance and the power cord do not come into contact with heat sources (e.g. hot plates, gas flames).

- Do not operate the appliance near explosive and/or flammable vapours.
- Do not operate the device near flammable materials.
- Do not expose the device to extreme conditions, such as:
 - High humidity or wetness
 - Extreme temperatures
 - Direct sunlight
 - Open fire

CAUTION!

- Remember the positions of all parts of the device when you unpack it, in case you need to pack it up and transport it again.
- Do not use the appliance until all of its parts are properly in their intended locations.
- Do not let the power cord hang down.
TRIPPING HAZARD!

NOTE!

FIRE HAZARD!


- Do not place the device on a hot surface or near strong heat sources.
- Do not place any objects on the LED face and neck mask.
- Do not cover the device and the air vents.
- Do not cover or clog openings on the appliance.
- Good ventilation around the unit is required to properly dissipate heat and to ensure effective operation. There must be a safety distance of at least 10 cm around the device.
- The device is not intended to be operated with an external timer or a separate remote control system.
- The device includes electrical circuits and LED lights. You must not press or fold the product.

2 CONTENT

After unpacking, make sure that the following parts have been included:

- LED face mask with head strap and USB cable
- Neck extension with USB cable
- Remote control
- Power cord with adapter
- Instruction manual with warranty

3 DEVICE PARTS

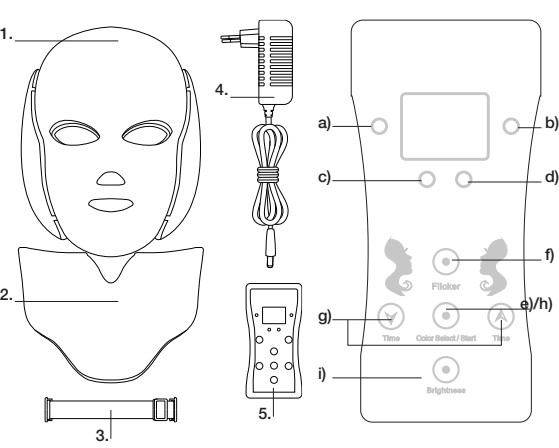

1. Face Mask
 2. Neck Mask
 3. Head Strap
 4. Power Cord with Adapter
 5. Remote Control
- a) Power Indicator
b) Function on
c) Light mode on
d) Automatic programme on
e) On/Off button
f) Flicker button
g) Time button
h) Color Select Button
i) Brightness Button

4 INSTALLATION

4.1 Unpacking

WARNING!

RISK OF DAMAGE!

When unpacking the device, do not use pointed or sharp-edged objects.

1. Carefully unpack the device. Please note the information for the disposal of packaging materials in Chapter 10 – DISPOSAL.
2. The device may be protected for transport with transport locks. Remove them completely. Do not use aggressive cleaning agents to remove leftovers of the transport locks.
3. Before using the LED face and neck mask, check whether the device is damaged.
4. Check the scope of delivery, see Chapter 2 – CONTENT.

4.2 Cleaning

WARNING!

Before each device cleaning, the LED face and neck mask must be switched off.

RISK OF ELECTRIC SHOCK!

Never immerse the device or power cord in water or other liquids.

1. Clean the LED face and neck mask with warm water and standard household washing-up liquid.
2. Dry the cleaned parts with a soft cloth.

5 OPERATION

-  **NOTE!**

- Do not use for more than 15-20 minutes per day.
 - Do not use for long periods of time.
 - For a more intense effect, use your usual skin care.
 - If you are using the LED face and neck mask in combination with a cosmetic facial mask or skincare product, we recommend choosing the red LED light. Then clean and dry the LED mask with a damp, soft cloth.
 - Ideally, use the LED face and neck mask 2 - 3 times a week. In order to achieve a lasting effect, consistent and regular use is necessary.
 - In the case of permanent regular use, it is recommended to use the LED face and neck mask for a maximum of 2 months and then pause for 2 months.

With regular use, the following occurs:

- Improvement of the quality and elasticity of the skin
- Wrinkle reduction
- Blood circulation support
- Facial circulation

1.

Gently cleanse and dry the face and neck. Do not rub your face to avoid skin irritations.

2.

You can apply a cosmetic product (e.g. face cream, facial mask or skin care product) to the face and neck to intensify the effect of the LED face and neck mask.

3.

Test the functions of the remote control before putting on the LED mask.

4.

Connect the USB cables of the face and neck mask with the remote control.
ATTENTION! DO NOT connect the USB cables of the LED face mask and/or neck mask to any device other than to the included remote control.

5.

If necessary: Connect the face mask with the neck mask by inserting the flap of the neck mask into the slot of the face mask.

6.

Connect the power cord with the remote control and the power supply.

7.

Put the mask onto your face and use the neck extension if necessary. For a comfortable hold, tighten the included head strap.

8.

Do not read books, watch TV or computer during use. Keep your eyes closed. For a wellness experience, we recommend using the LED face and neck mask while sitting or lying down comfortably.

9.

Switch on the LED face and neck mask via the remote control (press “Start”).
ATTENTION! Do not turn on the device until the mask is on the face.

10.

You can also use the remote control for:
 - Color selection (C1- C8): Red (C1), Green (C2), Blue (C3), Yellow (C4), Purple (C5), Turquoise (C6), White (C7) or Automatic Program (C8)
 - Time setting (Time+ / Time -) – maximum setting is 90 minutes. We recommend an application of 15-20 minutes. When the preset time has elapsed, the device switches to stand-by mode. When you are not using the time setting buttons, the automatic preset time will keep the device in operation for 30 minutes.
 - Brightness adjustment (Brightness - A1-A9) to adjust the light intensity. Set the intensity to the lowest value at the beginning of the application and increase the intensity from application to application.
 - With the "Flicker" button, you start the flickering of the mask, which is used for a higher and more intense lighting effect.
 - F1 – On
 - F2 – fast flickering
 - F3 – medium-fast flickering
 - F4 – slow flickering

Long-term use of this feature is not recommended (maximum once a week).

7 light modes

Mode	Color	Effect
C1	Red	Smoothes fine lines and restores firmness
C2	Green	Balances moisture and controls excess oil
C3	Blue	Purifies skin and clarifies breakouts
C4	Yellow	Evens skin tone and soothes redness
C5	Purple	Smoothes imperfections and refines skin texture
C6	Cyan	Energizes skin and revives vitality
C7	White	Plumps deep layers and brightens dullness
C8	Auto-cycle	Provides comprehensive care for an all-in-one skin radiance

6 STORAGE

-  **DANGER!**

If you do not use the device for a longer period of time, we recommend that you store it in a safe place.

1.

The LED face and neck mask should be cleaned before every use - see chapter 7 CLEANING AND CARE.

2.

Keep the device in a safe place where children and animals do not have access to.

7 CLEANING AND CARE

-  **WARNING!**

Before each cleaning, the device must be switched off.
DANGER OF SHORT CIRCUIT!

 - Never immerse the device or power cord in water or other liquids, do not clean it under running water.
 - Make sure that no liquids get into the case during cleaning.
 - Make sure that no moisture penetrates the connection socket.

Poor cleanliness of the device can destroy the surface of the device, which affects the service life and potentially leads to dangerous situations. Therefore, clean the LED face and neck mask regularly.

- Do not use aggressive abrasive cleaners or pointed or sharp-edged instruments to clean the appliance, as they can scratch and destroy the surfaces.
1.

Turn off the LED face and neck mask before each cleaning.
2.

Before cleaning, the device must be completely cooled down.
3.

Clean the LED face and neck mask with warm water and standard household washing-up liquid.
4.

Dry the cleaned parts with a soft cloth.

-  **NOTE!**

It is not possible to replace the LED lights.

8 TROUBLESHOOTING

-  **DANGER!**

- Never try to repair the device yourself. If your device is not working properly, contact the retailer where you purchased the device.
 - Never operate a defective device.
 - Never operate a device that has been dropped.

If malfunctions occur during operation, please check the following table to see if you can fix the problem yourself. All other repairs are not permitted and the warranty claim expires.

Problem	Possible Cause	Action
Device can not be turned on.	Device is not connected correctly.	Make sure that the USB cable is correctly connected to the remote control and the power cord is correctly connected to the power supply.

9 TECHNICAL DATA

Device Type:	Cosmetic LED Face & Neck Mask
Model Name:	FNM 2606
Material:	ABS
Number of LEDs:	192 138 LEDs for face mask + 54 LEDs for neck mask
Power:	9.5W
Input voltage:	18V DC
Input current:	1A DC
Product Dimensions:	21 x 13 x 35 cm
Net Weight:	0.63 kg
Adaptor Cable Length:	140 cm

Subject to technical changes!

Adaptor Specifications

Manufacturer:	Guangzhou Hongxin Beauty Salon Equipment Co., Ltd.
	401, Building 2, Xinsheng Science Park, No. 166 Yingbin Avenue West, HuaduDistrict, Guangzhou (Location: Room 402, Building 2)
Imported by:	Jaxmotech GmbH Ostring 60, 66740 Saarlouis, Germany
Model:	1820
Input voltage:	AC 100-240V
Input AC frequency:	50/60Hz
Output voltage:	18V DC
Output current:	1A DC
Output power:	18W
Average active efficiency:	85.36%
Efficiency at low load (10%):	83.22%
No-load power consumption:	0.075 W

Subject to technical changes!

- 10 DISPOSAL**

- When unpacking, make sure that the components of the packaging (polyethylene bags, polystyrene pieces) do not come within the reach of children. **DANGER OF SUFFOCATION!**
 - Old appliances that are no longer in use must be sent to the responsible recycling centre. Under no circumstances should they be exposed to open flames.
 - Old appliances are not unusable waste. Environmentally friendly disposal recovers many valuable raw materials.
 - When electrical equipment is disposed in landfills, substances that are hazardous to health can enter the groundwater. Thus, such substances enter the food chain and harm your health and well-being.
 - Before you dispose of any old device, be sure to make it inoperable first! This means always removing the batteries and disposing of them separately.
 - The materials used in the device are recyclable and are provided with appropriate information. By disposing of your old device or its materials as well as the packaging properly, you make a significant contribution to protecting our environment.
 - Dispose of the packaging material in the appropriate disposal containers in accordance with the local regulations of your place of residence.
 - If there are no suitable disposal containers in your living area, take these materials to a suitable municipal collection point.
 - For more information, please contact your specialist dealer or your local municipal waste disposal facility.

-  **Disposal of packaging**

Please sort the packaging for recycling. Put cardboard and paperboard in the waste paper bin and plastic film in the recycling bin.

-  **Correct disposal of used electrical and electronic equipment (Electronic waste):**

The symbol of the crossed-out waste bin indicates the need for separate disposal of electrical and electronic devices. According to European regulations, used electrical and electronic equipment may no longer be treated as normal household waste, but must be handed in at a designated collection point for the recycling of such equipment. Local waste management companies have set up collection points for this purpose, where private households can hand in their old appliances free of charge. Please contact your local authority or the municipal waste disposal companies to find out about the regional possibilities of returning these items.

11 MANUFACTURER'S WARRANTY

- We offer a 2-year warranty on your device and the standard commercial warranty from the date of issue of the invoice or buying receipt.
- Within this warranty period, upon presentation of the proof of purchase or the buying receipt, all manufacturing and/or material defects that occur will be settled free of charge by repair and/or replacement of the defective parts or (at our discretion) by exchange for an equivalent, flawless article.
- The manufacturer is not liable for personal injury or property damage caused by improper use or maintenance.
- Easily breakable parts such as glass, plastic or lamps are excluded from the warranty.
- The warranty is void if the device has been opened and/or modifications made to the device by you or a third party not authorized by us.
- In the event of improper use, the safety and functionality of the device can no longer be guaranteed and any warranty claim expires.

- Any use other than as described in this operating manual is not permitted and will result in loss of warranty, loss of warranty and exclusion of liability.
- Printing errors and changes to the device, the operating instructions or the packaging are reserved.

If you would like to make a complaint, we generally recommend that you first contact the dealer from whom you purchased the device.

If a repair is necessary, you can reach our hotline at the following Service number:
+49 (0)6831 505 98 97.

Technical Service

Jaxmotech GmbH
Ostring 60
66740 Saarlouis
Germany

E-Mail: service@jaxmotech.de

Jaxmotech GmbH
Ostring 60
66740 Saarlouis
Germany
Service Hotline: +49 (0)6831 5059897
service@jaxmotech.de
www.jaxmotech.de