


User Manual

CASALUX°

FLOOR LAMP WITH SHELF



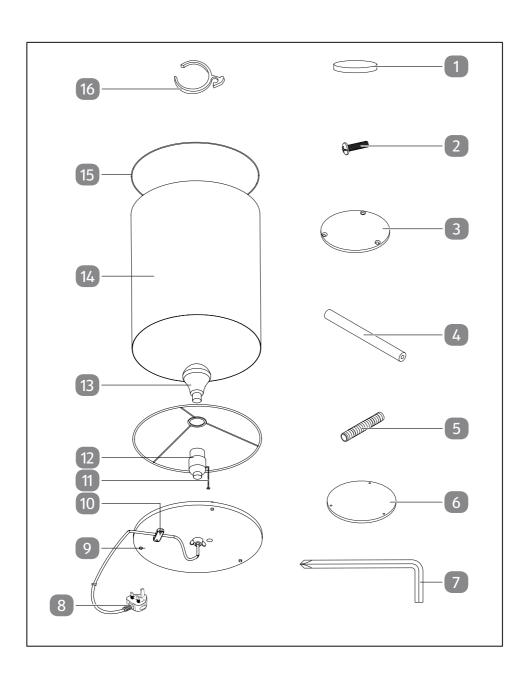

Scope of delivery/device components

- 1 Cotton pad (4x)
- 2 Screw (6x)
- 3 Shelf
- 4 Shelf bar (9x)
- 5 Threaded rod (6x)
- 6 Intermediate shelf (2x)
- 7 Square with cross recess
- 8 Mains plug
- 9 Lamp base
- 10 Cord anchorage
- 11 Pull switch
- 12 Lamp socket
- 13 Light source
- 14 Lampshade
- 15 Lampshade holder
- 16 Cable holder (2x)
 User manual (not shown)

Table of content

Overview	2
Scope of delivery/device components	
General information	5
Reading and storing the user manual	5
Proper use	
Explanation of symbols	5
Safety	
Safety notes	6
Before first use	
Check the product and scope of delivery	10
Assembly	
1 Installing the lower shelving part	10
2 Installing the upper shelving part	
3 Installing the lamp base	
4 Installing the lampshade	12
5 Securing lamp base and cable	
Operation	12
Inserting LED illuminant	12
Installation	
Switching on/switching off the product	
Replacing LED illuminant	
Cleaning	14
Storage	15
Technical data	
Declaration of conformity	15
Disposal	
Disposing of packaging	
	16

General information

Reading and storing the user manual



This user manual is a part of the floor lamp with shelf (hereinafter referred to as "product"). It contains important information on how to set up and use the device.

Read the user manual carefully, in particular the safety instructions, before using the product. Failure to follow this user manual may lead to severe injuries or product damage.

This user manual is based on the standards and regulations applicable within the European Union and the United Kingdom. Outside the EU and the UK, please also ensure compliance with the relevant country-specific directives and laws.

Keep this user manual for future reference. If you pass this product on to a third party, you must also supply this user manual.

This manual is also available in PDF format from our after sales support.

Proper use

The product is exclusively intended for indoor use in dry environments. Shelve spaces are intended for lightweight, decorative objects only.

The product is intended for private use only and is not suitable for commercial use. Use the product only as described in this operating manual. Any other use is improper and may lead to product damage or even personal injury. This product is not a toy.

The manufacturer or retailer assumes no liability for damage caused by improper or incorrect use.

Explanation of symbols

The following symbols are used in this user manual, on the product or on the packaging.



This symbol provides you with useful additional information on handling and use.



Declaration of conformity (see chapter "Declaration of conformity"): Products marked with this symbol meet all the applicable Community regulations of the European Economic Area.

Explanation of symbols



The UK Conformity Assessed (UKCA) seal states that the product meets all legal requirements in the UK and that the corresponding conformity assessments were successfully completed.



This symbol indicates that the product complies with the protection class II.



For use in dry places only.

Safety

The following signal words are used in this user manual.



This signal symbol/word denotes a hazard with an average risk level that could lead to death or severe injury if it is not avoided.



This signal symbol/word denotes a hazard with a low risk level that could lead to mild or moderate injury if it is not avoided.

NOTE!

This signal word provides a warning about potential material damage.

Safety notes



Risk of electric shock!

Faulty electric installation or excess mains voltage can cause an electric shock.

- Only plug in the product if the mains voltage in your household matches the information shown on the rating plate.
- Do not operate the product if there is visible damage.
- Never attempt to repair the product yourself, but have it repaired by qualified professionals. Do not open the housing

- under any circumstances and do not insert any objects inside the housing.
- No liability is assumed and warranty claims shall be excluded in the case of unauthorised repairs, improper connection or incorrect operation.
- Do not operate the product by means of an external timer or separate remote-control system.
- Do not operate the product with an external dimmer.
- Do not operate the product with damp hands. Do not touch the power plug with wet or damp hands.
- Do not use the product near water or other liquids, or in areas where water or other liquids can collect. Do not use the product in damp areas or in the rain. Also protect the power plug from humidity.
- Plug the power plug into an easily accessible outlet, so that –
 in an emergency the product can be quickly disconnected
 from the power supply.
- Unplug the power plug when the device is not in use and before cleaning.
- When repairing, only use parts that correspond to the original product data. There are electrical and mechanical parts in this product to protect you from danger sources.
- The outer flexible cable of the product or the cable of this light cannot be replaced. If the wire/cable is damaged, the light must be scrapped.
- Never use the power cable as a carry handle.
- Never pull the power cable out of the socket by the cord; always grip the plug instead.
- Install the power cable so that no-one can trip over it.
- Do not bend the power cable and do not lay it over sharp edges.

WARNING!

Danger to children and persons with reduced physical, sensory or mental abilities (e.g. partially disabled, elderly people with reduced physical and mental abilities) or lack of experience and knowledge (e.g. older children).

- This product can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge if they have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved.
- This product must not be used by children under 8.
- Keep children under 8 away from the product.
- Children may not play with the product.
- Children over 8 years should only carry out cleaning and basic maintenance under adult supervision.
- Do not leave the product unattended when in use.

WARNING!

Fire hazard!

Parts of the product become hot during operation.

- Remove any protective film prior to commissioning.
- Do not hang objects over the product and keep a safe distance to flammable materials.
- Do not cover the product with fabric or objects.
- Let the device cool down after operation, before cleaning, transporting or replacing LED illuminants.

A CAUTION!

Risk of injury!

The light of the LEDs is very bright and can damage your eyes when looking directly at them.

- Do not look directly into the light of the LEDs.
- Do not look at the LEDs with an optical instrument while the product is in operation.



Danger of burns!

Parts of the product become hot during use. Illuminants become hot and very bright.

- Make sure the light bulb has been switched off and has cooled down before touching it.
- Make sure not to shine the light into the eyes of persons or animals when checking or commissioning the product.
- Exclusively use illuminants that are suitable for the lamp.

NOTE!

Risk of damage!

Improper use may damage the product.

- Place the product on an easily accessible, level and sufficiently stable surface.
- Do not place the product on the edge of the surface.
- Do not place the product on or next to hot surfaces.
- Do not let the cable come into contact with hot parts.
- Never expose the product to high temperatures, extreme cold or weather influences.
- Protect the product against strong vibrations and blows.
- Always switch the product off if it is not in use.

- No longer use the product once it has been damaged.

Before first use

Check the product and scope of delivery

NOTE!


Risk of damage!

If opening the packaging with a sharp knife or other pointed object, be careful to avoid damaging the product's surface.

- Proceed carefully with opening the packaging.
- 1. Take the product out of the packaging.
- 2. Check that the delivery is complete (see chapter "Scope of delivery/device components").
- 3. Inspect the product and individual parts for damage. Do not operate a damaged product, instead, contact the manufacturer via the service center listed on the warranty card.

Assembly


1 Installing the lower shelving part

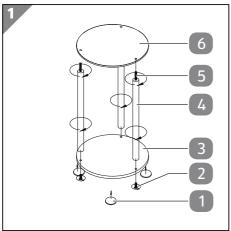

- 1. Screw the shelving rods 4 to the shelf 3 with screws 2.
- 2. Apply the cotton pads 1 over the screws 2 from the bottom.
- 3. Screw the threaded rods 5 halfway into the shelving rods.
- 4. Place the intermediate shelf 6 on the shelving rods.

Make sure you insert the threaded rods through the bores in the intermediate shelf.


2 Installing the upper shelving part

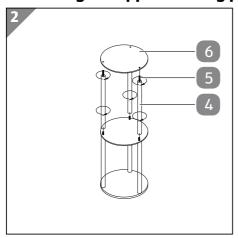

- 1. Screw the shelving rods 4 onto the threaded rods 5.
 - Tighten the shelving rods to guarantee the shelving unit is stable.
- 2. Screw the threaded rods 5 halfway into the shelving rods.
- 3. Place the intermediate shelf 6 on the shelving rods.


Make sure you insert the threaded rods through the bores in the intermediate shelf.

3 Installing the lamp base

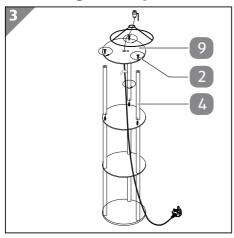


- 1. Screw the shelving rods 4 onto the threaded rods 5.
 - Tighten the shelving rods to guarantee the shelving unit is stable.
- 2. Position the lamp base 9 on the shelving rods.
- 3. Use the screws 2 to screw the lamp base to the shelving rods.

4 Installing the lampshade

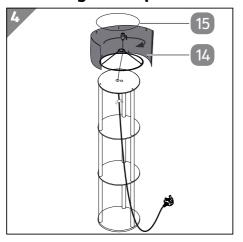

- Install the lampshade 14 over the bottom lamp base lampshade holder
 and the lampshade holder 15.
- 2. Secure the lampshade using the lampshade's Velcro fasteners.

5 Securing lamp base and cable

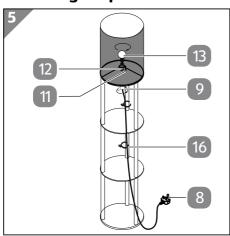

- 1. Insert the lampshade socket into the central hole of the lamp base 9.
- 2. Use the wing nut to secure the lampshade from below.
- 3. Use the cable mounts 16 to secure the cable to shelving rods 4.

Operation

Inserting LED illuminant



Use a lint-free, dry cloth to insert the LED illuminant and prevent leaving grease residue on the LED illuminant.

 Insert the LED illuminant 13 into the lamp socket 12 and slightly tighten it clockwise.

Installation



Risk of injury!

- Do not place the product in areas where people will be walking around.

NOTE!

Risk of damage!

- Do not cover the product.
- Do not position the product within the operating range of doors, windows, cabinets, etc.

Setting up the product

- 1. Place the product on a level surface.
- 2. Plug the power plug 8 into a properly installed outlet.

The product has been set up.

Switching on/switching off the product

- Use the pull switch 11 to switch the product on and off.

Replacing LED illuminant



Risk of electric shock!

Excess mains voltage can lead to an electric shock.

- Only exchange defective bulbs when the device is disconnected from the mains voltage.
- Only exchange defective bulbs with bulbs of the same type.

WARNING!

Danger of burns!

The LED illuminant may become very hot during operation. Improper handling of the product may cause burns.

- Let the device cool down after operation before you replace LED illuminant.



Use a lint-free, dry cloth to insert the LED illuminant and prevent leaving grease residue on the LED illuminant.

- 1. Allow the product to cool down completely.
- 2. Unscrew the LED illuminant 13 counter-clockwise and pull it from the lamp socket 12.
- 3. Screw the new illuminant clockwise into the lamp socket. Exclusively use illuminants that are suitable for the product (see section "Technical data").
- 4. Plug the power plug 8 into a properly installed outlet.

Cleaning

A WARNING!

Risk of electric shock!

Moisture in the device may cause a short circuit or electric shock.

- Always disconnect the mains plug from the socket before assembly, disassembly or cleaning.
- Do not immerse the product in water or other liquids.
- Make sure that no water or other liquid gets inside the housing.
- After cleaning, carefully dry the product before operating again.

NOTE!

Risk of damage!

Improper handling of the product can damage the product.

- Do not use any aggressive cleaners, sharp or metal cleaning utensils such as knives, hard scrapers or similar items. These could damage the surfaces.
- Never wash the product in the dishwasher. This would destroy it.
- Let the product cool off completely after each use.

Wipe the product clean with a soft, slightly damp cloth.

Storage

Allow the product to cool down completely. All parts must be completely clean and dry before they are put away.

- Keep the product in a dry place.
- Safely store the product out of the reach of children at a storage temperature between 0°C and 25°C (room temperature).

Technical data

Model: FL 0413 Item number: 858338

 Supply voltage:
 220-240 V~, 50/60 Hz

 Rated power:
 1 x max. 4.9 W LED. E27

Weight: 4.18 kg
Cable length: approx. 2.3 m
Cable length (lying on the floor): approx. 1.05 m

Lamp dimensions: approx. 29.5 x 29.5 x 158 cm

Protection class: II
IP rating: IP20

Bulb: 1 x 4.9 W LED, E27 (supplied)

This product contains an energy efficiency class F illuminant.

User can replace the illuminant.

Declaration of conformity



You can request the EU declaration of conformity from the address provided at the end of this manual.



You can request the UK declaration of conformity from the address provided at the end of this manual.

Disposal

Disposing of packaging



Dispose of packaging according to type. Sort the paperboard and cardboard as waste paper and the film as recyclable material.

Dispose of old electrical device

Applicable in the European Union and other European countries with systems for separate collections of recyclable waste.



Old electrical products may not be disposed of as household waste!

If the product cannot be used anymore, each consumer **is obligated by law to dispose of old products separately from household waste**, e.g. at a municipal/city district collection point. It is thereby

ensured that old products are professionally recycled and negative effects on the environment are avoided. Therefore, electrical products are marked with the above symbol.



Great care has gone into the manufacture of this product and it should therefore provide you with years of good service when used properly. In the event of product failure within its intended use over the course of the first 3 years after date of purchase, we will remedy the problem as quickly as possible once it has been brought to our attention. In the unlikely event of such an occurrence, or if you require any information about the product, please contact us via our helpline support services, details of which are to be found both in this manual and on the product itself.



PRODUCED IN CHINA FOR:

ALDI STORES LTD. PO BOX 26, ATHERSTONE WARWICKSHIRE, CV9 2SH

ALDI STORES (IRELAND) LTD. PO BOX 726, NAAS, CO. KILDARE Visit us at www.aldi.com



